Installation, Operation, and Maintenance Manual

Pumpl/Vorks™ INDUSTRIAL

Model: PWA-LF



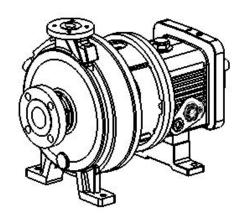




TABLE OF CONTENTS

		Contractive should be	INICTALL 45 46 47
Introduction	======	Suction-piping checklist Discharge piping checklist	INSTALL-15,16,17 INSTALL-18,19
Introduction	INTRO-2	Discharge piping checklist	INSTALL-10,19
Safety	INTRO-3 INTRO-4	Figures	
Warranty	INTRO-4	Figure 1: Sleeve Type Bolts	INSTALL-2
Product Description		Figure 2: J Type Bolts	INSTALL-3
General Description	DESIGN-2	Figure 3: Baseplate Top View	INSTALL-3
Part Description	DESIGN-2,3	Figure 4: Baseplate Side View	INSTALL-4
Nameplates	DESIGN-4,5	Figure 5: Jackscrew Bolts	INSTALL-5
		Figure 6: Leveling Baseplate – Motor Pads	INSTALL-5
Figures		Figure 7: Leveling Baseplate – Pump Pads	INSTALL-6
Figure 1: PWA-LF Pump	DESIGN-2	Figure 8: Initial Grout Figure 9: Final Grout	INSTALL-6 INSTALL-7
Figure 2: PWA-LF Power End Cross Sectional	DESIGN-3	Figure 9. Final Grout Figure 10: Dial Indicator Alignment	INSTALL-7
Figure 3: Pump Casing Nameplate – English	DESIGN-4	Figure 11: Incorrect Vertical Alignment	INSTALL-10
Figure 4: Pump Casing ID Tag	DESIGN-4	Figure 12: Incorrect Horizontal Alignment	INSTALL-11
Figure 5: Pump Casing Nameplate – Metric	DESIGN-5	Figure 13: Correct Vertical Alignment	INSTALL-12
Figure 6: Bearing Frame Nameplate	DESIGN-5	Figure 14: Correct Horizontal Alignment	INSTALL-12
Tables			
Table 1: Hydraulic Sizes by Group	DESIGN-2	Tables	
Table 2: Pump Casing Parts	DESIGN-2	Table 1: Guidelines for Locations	INSTALL-2
Table 3: Power End Main Parts	DESIGN-3 DESIGN-4	Table 2: Alignment Checks	INSTALL-8
Table 4: Nameplate Description Table 5: Casing Nameplate Definitions - English	DESIGN-4	Table 3: Cold Alignment	INSTALL-8
Table 6: Casing Nameplate Definitions - Metric	DESIGN-5	Table 4: Hot Alignment	INSTALL-8
Table 7: Power End Nameplate Definitions	DESIGN-5	Table 5: Alignment Measurement Guidelines	INSTALL-9
		Table 6: Angular Alignment for Vertical Corr.	INSTALL-10
Handling		Table 7: Angular Alignment for Horizontal Corr. Table 8: Parallel Alignment for Vertical Corr.	INSTALL-11 INSTALL-11
Delivery Inspection	HANDLE-1	Table 9: Parallel Alignment for Horizontal Corr.	INSTALL-11 INSTALL-12
Transportation	HANDLE-2	Table 10: Piping Guidelines	INSTALL-12
Pump Handling	HANDLE-2	Table 11: Suction Piping Guidelines	INSTALL-15,16
Lifting Methods	HANDLE-3,4,5	Table 12: Suction Piping Guidelines – Liq. Below	INSTALL-16
Storage	HANDLE-5	Table 13: Suction Piping Guidelines – Liq. Above	INSTALL-16
Pump Storage Requirements	HANDLE-5	Table 14: Discharge Piping Guidelines	INSTALL-18
Frost Proofing	HANDLE-6		
Figures		Commissioning, Startup, Operation and Shu	tdown
Figure 1: Bare Pump Lifting	HANDLE-3		
Figure 2: Base Mounted Pump Lifting	HANDLE-3	Preparation for Startup	STARTUP-2
Figure 3: Base Mounted Pump with Motor	HANDLE-4	Coupling Guard	STARTUP-2,3,4
Figure 4: Fab Base Mounted Pump with Motor	HANDLE-4	Pump Rotation	STARTUP-4
Figure 5: Bare Pump with Adapter Lifting	HANDLE-5	Setting Impeller Clearance	STARTUP-5
Tables		PWA Standard Impeller Clearances	STARTUP-6
Table 1: Lifting Methods	HANDLE 2	Dial Indicator Method	STARTUP-6
Table 1: Lifting Methods Table 2: Storage Requirements	HANDLE-2 HANDLE-5	Feeler Gauge Method Install Coupling	STARTUP-7 STARTUP-7
Table 3: Frostproofing	HANDLE-6	Install Coupling Guard	STARTUP-7-11
Tuble 3. Troseprooning	THURSE O	Bearing Lubrication	STARTUP-11
		Pump Priming	STARTUP-12,13,14
		Start Up Precautions	STARTUP-15,16
		Shut Down	STARTUP-16
Installation			
Installation Pre-installation	INSTALL-2		
Pre-installation Pump Location Guidelines	INSTALL-2 INSTALL-2	Figures	
Pre-installation Pump Location Guidelines Foundation Requirements	INSTALL-2 INSTALL-3	Figure 1: Guard Removal, Slide Driver Half	STARTUP-2
Pre-installation Pump Location Guidelines Foundation Requirements Baseplate Mounting Procedures	INSTALL-2 INSTALL-3 INSTALL-3	Figure 1: Guard Removal, Slide Driver Half Figure 2: Guard Removal, Driver Side End Plate	STARTUP-3
Pre-installation Pump Location Guidelines Foundation Requirements Baseplate Mounting Procedures Install the Baseplate	INSTALL-2 INSTALL-3 INSTALL-3 INSTALL-3,4,5,6	Figure 1: Guard Removal, Slide Driver Half Figure 2: Guard Removal, Driver Side End Plate Figure 3: Guard Removal, Driver Half	STARTUP-3 STARTUP-3
Pre-installation Pump Location Guidelines Foundation Requirements Baseplate Mounting Procedures Install the Baseplate Grout the baseplate	INSTALL-2 INSTALL-3 INSTALL-3 INSTALL-3,4,5,6 INSTALL-6,7	Figure 1: Guard Removal, Slide Driver Half Figure 2: Guard Removal, Driver Side End Plate Figure 3: Guard Removal, Driver Half Figure 4: Guard Removal, Pump Half	STARTUP-3 STARTUP-3 STARTUP-4
Pre-installation Pump Location Guidelines Foundation Requirements Baseplate Mounting Procedures Install the Baseplate Grout the baseplate Install the pump, driver, and coupling	INSTALL-2 INSTALL-3 INSTALL-3 INSTALL-3,4,5,6 INSTALL-6,7 INSTALL-8	Figure 1: Guard Removal, Slide Driver Half Figure 2: Guard Removal, Driver Side End Plate Figure 3: Guard Removal, Driver Half Figure 4: Guard Removal, Pump Half Figure 5: Mounting Indicator	STARTUP-3 STARTUP-3 STARTUP-4 STARTUP-6
Pre-installation Pump Location Guidelines Foundation Requirements Baseplate Mounting Procedures Install the Baseplate Grout the baseplate Install the pump, driver, and coupling Pump-to-driver alignment	INSTALL-2 INSTALL-3 INSTALL-3 INSTALL-3,4,5,6 INSTALL-6,7 INSTALL-8 INSTALL-8	Figure 1: Guard Removal, Slide Driver Half Figure 2: Guard Removal, Driver Side End Plate Figure 3: Guard Removal, Driver Half Figure 4: Guard Removal, Pump Half Figure 5: Mounting Indicator Figure 6: Setting Impeller Clearance	STARTUP-3 STARTUP-3 STARTUP-4
Pre-installation Pump Location Guidelines Foundation Requirements Baseplate Mounting Procedures Install the Baseplate Grout the baseplate Install the pump, driver, and coupling Pump-to-driver alignment Alignment checks	INSTALL-2 INSTALL-3 INSTALL-3 INSTALL-3,4,5,6 INSTALL-6,7 INSTALL-8 INSTALL-8 INSTALL-8	Figure 1: Guard Removal, Slide Driver Half Figure 2: Guard Removal, Driver Side End Plate Figure 3: Guard Removal, Driver Half Figure 4: Guard Removal, Pump Half Figure 5: Mounting Indicator Figure 6: Setting Impeller Clearance Figure 7: Required Guard Parts	STARTUP-3 STARTUP-3 STARTUP-4 STARTUP-6 STARTUP-7
Pre-installation Pump Location Guidelines Foundation Requirements Baseplate Mounting Procedures Install the Baseplate Grout the baseplate Install the pump, driver, and coupling Pump-to-driver alignment Alignment checks Permitted indicator values for alignment checks	INSTALL-2 INSTALL-3 INSTALL-3 INSTALL-3,4,5,6 INSTALL-6,7 INSTALL-8 INSTALL-8	Figure 1: Guard Removal, Slide Driver Half Figure 2: Guard Removal, Driver Side End Plate Figure 3: Guard Removal, Driver Half Figure 4: Guard Removal, Pump Half Figure 5: Mounting Indicator Figure 6: Setting Impeller Clearance	STARTUP-3 STARTUP-3 STARTUP-4 STARTUP-6 STARTUP-7 STARTUP-8
Pre-installation Pump Location Guidelines Foundation Requirements Baseplate Mounting Procedures Install the Baseplate Grout the baseplate Install the pump, driver, and coupling Pump-to-driver alignment Alignment checks	INSTALL-2 INSTALL-3 INSTALL-3 INSTALL-3,4,5,6 INSTALL-6,7 INSTALL-8 INSTALL-8 INSTALL-8 INSTALL-8 INSTALL-8	Figure 1: Guard Removal, Slide Driver Half Figure 2: Guard Removal, Driver Side End Plate Figure 3: Guard Removal, Driver Half Figure 4: Guard Removal, Pump Half Figure 5: Mounting Indicator Figure 6: Setting Impeller Clearance Figure 7: Required Guard Parts Figure 8: Guard Install, Slide Pump Half	STARTUP-3 STARTUP-3 STARTUP-4 STARTUP-6 STARTUP-7 STARTUP-8 STARTUP-9
Pre-installation Pump Location Guidelines Foundation Requirements Baseplate Mounting Procedures Install the Baseplate Grout the baseplate Install the pump, driver, and coupling Pump-to-driver alignment Alignment checks Permitted indicator values for alignment checks Alignment measurement guidelines	INSTALL-2 INSTALL-3 INSTALL-3 INSTALL-3,4,5,6 INSTALL-6,7 INSTALL-8 INSTALL-8 INSTALL-8 INSTALL-8 INSTALL-9 INSTALL-9	Figure 1: Guard Removal, Slide Driver Half Figure 2: Guard Removal, Driver Side End Plate Figure 3: Guard Removal, Driver Half Figure 4: Guard Removal, Pump Half Figure 5: Mounting Indicator Figure 6: Setting Impeller Clearance Figure 7: Required Guard Parts Figure 8: Guard Install, Slide Pump Half Figure 9: Guard Install, Slide Motor Half Figure 10: Guard Install, Slide End Plate Figure 11: Guard Install, Slide Motor Half to Fit	STARTUP-3 STARTUP-4 STARTUP-6 STARTUP-7 STARTUP-8 STARTUP-9 STARTUP-10 STARTUP-10 STARTUP-11
Pre-installation Pump Location Guidelines Foundation Requirements Baseplate Mounting Procedures Install the Baseplate Grout the baseplate Install the pump, driver, and coupling Pump-to-driver alignment Alignment checks Permitted indicator values for alignment checks Alignment measurement guidelines Attach the dial indicators for alignment	INSTALL-2 INSTALL-3 INSTALL-3 INSTALL-3,4,5,6 INSTALL-6,7 INSTALL-8 INSTALL-8 INSTALL-8 INSTALL-9 INSTALL-9 INSTALL-9	Figure 1: Guard Removal, Slide Driver Half Figure 2: Guard Removal, Driver Side End Plate Figure 3: Guard Removal, Driver Half Figure 4: Guard Removal, Pump Half Figure 5: Mounting Indicator Figure 6: Setting Impeller Clearance Figure 7: Required Guard Parts Figure 8: Guard Install, Slide Pump Half Figure 9: Guard Install, Slide Motor Half Figure 10: Guard Install, Slide End Plate	STARTUP-3 STARTUP-4 STARTUP-6 STARTUP-7 STARTUP-8 STARTUP-9 STARTUP-10 STARTUP-10

TABLE OF CONTENTS

Figure 26: Casing Cover Inspection – Big Bore

Figure 27: Casing Cover Inspection – Taper Bore

Figure 28: Bearing Housing Inspection Grp 1/2

MAINT-20

MAINT-21

MAINT-22

Figure 14: Pump Priming – Foot Valve	STARTUP-14	Figure 29: Bearing Housing Inspection Grp 3	MAINT-
Figure 15: Pump Priming – Foot Valve and Bypass	STARTUP-14	Figure 30: Bearing Frame Assembly	MAINT-
		Figure 31: Shaft Assembly	MAINT-
Tables		Figure 32: Shaft Assembly Installation	MAINT-
Table 1: Impeller Clearances	STARTUP-5	Figure 33: Bearing Frame Assembly – Duplex Brg	MAINT-
Table 2: Guard Installation Guidelines	STARTUP-8	Figure 34: Duplex Bearing Installation on Shaft	MAINT-
Table 3: Lubrication Capacities	STARTUP-11	Figure 35: Shaft Assembly – Duplex Brg	MAINT-
Table 4: Oil Requirements Based on Temperature	STARTUP-12	Figure 36: Housing Assembly – Duplex Brg	MAINT-
Table 5: Recommended Lubricants	STARTUP-12	Figure 37: Shaft Assembly Installation – Duplex Brg	
		Figure 38: Bearing Frame Assembly – Grp 3	MAINT
		Figure 39: Duplex Bearing Installation on Shaft Grp	3 MAINT
aintenance		Figure 40: Shaft Assembly Duplex Brg – Grr 3	MAINT
Schedule	MAINT-2	Figure 41: Housing Assembly – Grp 3	MAINT
Bearings	MAINT-2	Figure 42: Shaft Assembly Installation – Grp 3	MAINT
Lubrication Requirements	MAINT-3	Figure 43: Shaft End Play Inspection	MAINT
Mechanical Seal Maintenance	MAINT-3	Figure 44: Shaft Sleeve TIR Inspection	MAINT
Disassembly	MAINT-4	Figure 45: Frame Face TIR Inspection	MAINT
Precautions	MAINT-4	Figure 46: Frame Adapter Installation	MAINT
Required Tools	MAINT-4	Figure 47: Frame Adapter TIR Inspection	MAINT
Drain Pump	MAINT-5	Figure 48: Labyrinth Oil Seal Installation	MAINT
Coupling Removal	MAINT-5	Figure 49: Labyrinth Oil Seal Assembly	MAIN
Back Pull-Out Removal	MAINT-6	Figure 50: Mechanical Seal Installation	MAINT
Impeller Removal	MAINT-7	Figure 51: Seal Chamber TIR Inspection	MAINT
•		Figure 52: Shaft Sleeve Installation	MAINT
Casing Cover Removal	MAINT-9,10	Figure 53: Impeller Installation	MAINT
Bearing Frame Disassembly	MAINT-10-15	Figure 54: Setting Impeller Clearance	MAINT
Pre-Assembly Checks	MAINT-16	rigure 54. Setting impelier clearance	IVIAIIVI
Part Replacement Guidelines	MAINT-18		
Bearing Frame Inspection	MAINT-18		
Seal Chamber Inspection	MAINT-19-21	Tables	
Bearing Housing Inspection	MAINT-21		
Bearing Fits and Tolerances	MAINT-23	Table 1: Oil Change Schedule	MAINT
Reassembly	MAINT-23	Table 2: Oil Fill Capacity	MAINT
Group 1,2	MAINT-24-29	Table 3: Oil Requirements Based on Temp	MAINT
Group 3	MAINT-29-32	Table 4: Recommended Oils	MAINT
Power Frame Assembly	MAINT-32-35	Table 5: Labyrinth Oil Seal Fit	MAINT
INPRO Labyrinth Seal Information	MAINT-36	Table 5: Labyritti Oii Sear Fit Table 6: When to Replace Impeller	MAINT
Final Assembly Checks	MAINT-37-44	Table 7: Shaft TIR Tolerances	
			MAIN
Figures		Table 8: Bearing Housing Checks	MAIN
Figure 1: Guard Removal	MAINT-5	Table 9: Bearing Fits and Tolerances	MAIN
Figure 2: Back Pullout Removal	MAINT-6	Table 10: Shaft End Play	MAIN
Figure 3: Coupling Hub Removal	MAINT-7	Table 11: Labyrinth Oil Seal Detail	MAIN
Figure 4: Impeller Removal	MAINT-7	Table 12: Labyrinth Oil Seal Installation	MAIN
Figure 5: Impeller O-Ring	MAINT-8	Table 13: Impeller Installation	MAIN
Figure 5: Impelier O-King Figure 6: Seal Chamber Removal		Table 14: Bolt Torque Values	MAIN
9	MAINT-8	Table 15: Casing Bolt Torque Values	MAIN
Figure 7: Mechanical Seal Removal	MAINT-9	Table 16: Bearing Designations	MAIN
Figure 8: Adapter Removal	MAINT-9		
Figure 9: Labyrinth Seal Removal	MAINT-10		
Figure 10: Shaft Assembly Removal	MAINT-11		
Figure 11: Hardware Removal	MAINT-11	Parts List	
Figure 12: Bearing Housing Removal	MAINT-11	i di ta Liat	
Figure 13: Bearing Removal	MAINT-12		
Figure 14: Hardware Removal Grp 1/2 Duplex Brg	MAINT-12	Figures	
Figure 15: Bearing Removal Grp 1/2 Duplex Brg	MAINT-13	Figure 1: Group 1 Pump Exploded View	PARTS
Figure 16: Labyrinth Seal Removal – Brg Hsg	MAINT-13	Figure 2: Group 2 Pump Exploded View	PARTS
Figure 17: Shaft Assembly Removal	MAINT-14	Figure 3: Group 2 Pump Exploded View	
Figure 18: Hardware Removal Grp 3	MAINT-14	rigure 3. Group 3 runip exploded view	PARTS
Figure 19: Bearing Removal Grp 3	MAINT-15	Tables	
Figure 20: Labyrinth Seal Removal Grp 3	MAINT-15	Tables	
Figure 21: Casing Inspection	MAINT-16	Table 1: Parts Lists	PARTS
Figure 22: Impeller Wear Inspection	MAINT-17	Table 2: Key	PARTS
Figure 23: Shaft TIR Inspection	MAINT-18		
Figure 24: Bearing Frame Surface Inspection	MAINT-19		
Figure 25: Casing Cover Inspection – Std. Bore	MAINT-20		
Figure 75' (asing i over inspection = stalling			

Introduction and Safety

Introduction

The purpose of this manual is to provide necessary information for installation, operation and maintenance of the PumpWorks Industrial Model PWA-LF.



CAUTION:

Read this manual carefully before installing and using the product. Improper use of the product can cause personal injury and damage to property, and may void the warranty.

Safety terminology and symbols

About safety messages

It is extremely important that you read, understand, and follow the safety messages in this manual before handling the product. They are published to help prevent these specific hazards:

- Personal accidents and health
- Product damage
- Product malfunction

Hazard criteria



DANGER:

A situation where a hazard, if not avoided, will result in serious bodily injury and/or death.



WARNING:

A situation where a hazard, if not avoided, could result in serious bodily injury and/or death.



CAUTION:

A situation where a hazard, if not avoided, could result in less severe bodily injury.



NOTICE:

A potential situation, which if not avoided, could lead to product malfunctions.

Safety



WARNING:

- The operator must be aware of safety precautions to prevent physical injury.
- Any pressure-containing device can explode, rupture, or discharge its contents if it is over pressurized. Take all necessary measures to avoid over-pressurization.
- Operating, installing, or maintaining the unit in any way that is not intended could cause death, serious personal injury, or damage to the equipment. This includes any modification to the equipment or use of parts not provided by PW-IND. If there is a question regarding the intended use of the equipment, please contact a PW-IND representative before proceeding.
- This manual clearly identifies accepted methods for disassembling units. These methods
 must be followed. Trapped liquid can rapidly expand and result in a violent explosion and
 injury. Never apply heat to impellers or their retaining devices to aid in their removal unless
 explicitly stated in this manual.
- If the pump/motor is damaged or leaking, do not operate as it may cause an electric shock, fire, explosion, release of toxic fumes, physical harm, or environmental damage.

 Correct/repair the problem prior to putting the pump back in service.
- Do not change the service application without the approval of an authorized PW-IND representative.

User safety

General safety rules

These safety rules apply:

- Always keep the work area clean.
- Pay attention to the risks presented by gas and vapors in the work area.
- Avoid all electrical dangers. Pay attention to the risks of electric shock or arc flash hazards.

Safety equipment

Use safety equipment according to local regulations. Use this safety equipment within the work area:

- Helmet
- Safety glasses
- Protective shoes
- Protective gloves
- Gas mask
- Hearing protection
- Safety devices



NOTICE:

Never operate a unit unless safety devices are installed. Also see specific information about safety devices in other chapters of this manual.

Electrical connections

Electrical connections must be made by certified electricians in compliance with all international, national, state, and local codes.

Precautions before work

- Provide a suitable barrier around the work area, for example, a guard rail.
- Make sure that all safety guards are in place and secure.
- Make sure that you have a clear path of retreat.
- Make sure that the product cannot roll or fall over and injure people or damage property.
- Make sure that the lifting equipment is in good condition.
- Use a lifting harness, a safety line, and a breathing device as required.
- Allow all system and pump components to cool before you handle them.
- Make sure that the product has been thoroughly cleaned.
- Disconnect and lock out power before you service the pump.
- Check the explosion risk before you weld or use electric hand tools.

Precautions during work



CAUTION:

Read this manual carefully before installing and using the product. Improper use of the product can cause personal injury and damage to property, and may void the warranty.

- Always wear Personal Protective Equipment (PPE).
- Always lift the product as illustrated in the Transportation and Storage Section.
- Beware of the risk of a sudden start if the product is used with an automatic control.
- Clean all components thoroughly after pump disassembly.
- Do not exceed the maximum working pressure of the pump.
- Do not open any vent or drain valve or remove any plugs while the system is pressurized.

- Make sure that the pump is isolated from the system and that pressure is relieved before you disassemble the pump, remove plugs, or disconnect piping.
- Never operate a pump without a properly installed coupling guard.

Product Warranty

Basic Coverage

PW-IND will remedy faults in products under these conditions:

- The faults are due to defects in design, materials, or workmanship.
- The faults are reported to a PW-IND representative within the warranty period.
- The product is used only under the conditions described in this manual.
- All service and repair work is done by PW-IND authorized personnel.
- Genuine PW-IND parts are used.

PW-IND will replace the Power End for 5 years after shipment, regardless of cause of failure. Contact your PW-IND representative for more information on the Power End warranty program.

Limitations to Warranty:

Except where noted above, the warranty does not cover faults caused by these situations:

- Deficient maintenance
- Improper installation
- Modifications or changes to the product and installation made without consulting PW-IND
- Incorrectly executed repair work
- Normal wear and tear

PW-IND assumes no liability for these situations:

- Bodily injuries
- Material damages
- Economic losses
- Environmental damage

Product Description

General description PWA-LF

The PWA-LF is a horizontal overhung, open impeller, centrifugal pump. This pump is ANSI B73.1 compliant.



Figure 1: PWA-LF pump

Table 1: Hydraulic sizes per drive unit size

Drive-unit size group	Number of hydraulic sizes
Group 1	3
Group 2	4
Group 3	1

Part description PWA-LF

Table 2: Pump casing parts

Part	Description	
Discharge	Top-centerline	
Casing ventilation	Self venting	
Gasket	Fully confined	
Mounting method	Integral foot	
Standard flange	ANSI class 150# flat-face serrated flange	
Optional flanges	 ANSI class 150# raised-face serrated flange ANSI class 300# flat-face serrated flange ANSI class 300# raised-face serrated flange 	

Impeller

The impeller is

- Fully open with radial vanes and balance holes.
- Threaded to the shaft
- The threads are sealed from the pumped liquid by an o-ring.

Cover

Standard seal

- The PWA-LF is available with three stuffing-box / seal chamber designs
 - Standard Bore
 - Big Bore
 - Taper Bore

Table 3: Power end main parts

Part	Description
Frame adapter	The carbon steel frame adapter has • A machined rabbet fitted to the seal chamber/ stuffing box cover
Power end	 Flinger oil lubrication is standard. No machining is required to convert from oil to grease or oil-mist lubrication. Regreaseable bearings and oil-mist lubrication are optional. The oil level is checked through a sight glass located on both sides of the power end. The power end is sealed with labyrinth seals. The power end is made in the following sizes: Group 1 Group 2 Group 3
Shaft	The shaft is available with or without a sleeve.
Bearings	 The Non-Drive End (INBOARD) bearing Carries only radial loads. Is free to float axially in the frame. Is a single-row deep-groove ball bearing The Drive End (OUTBOARD) bearing Is shouldered and locked to the shaft and housing to enable it to carry radial and thrust loads. Is a double-row angular-contact bearing, except for the Group 3 which uses a pair of single-row angular-contact ball bearings mounted back-to-back.

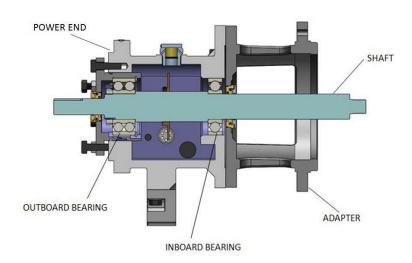


Figure 2: PWA-LF Power End Cross Sectional

Important information for ordering

Every pump has nameplates that provide information about the pump. The nameplates are located on the casing and the bearing frame.

When you order spare parts, identify this pump information:

- Model
- Size
- Serial number
- Item numbers of the required parts

Refer to the nameplate on the pump casing for most of the information. See Parts List for item numbers.

Nameplate types

Table 4: Nameplate Description

Nameplate	Description
Pump casing	Provides information about the hydraulic characteristics of the pump. Discharge x Suction x Nominal Maximum Impeller diameter (in inches). (Example: 2x3x8)
Bearing frame	Provides information about the bearings, lubrication and power end specific serial number.
ATEX	If applicable, your pump unit might have an ATEX nameplate affixed to the pump, the baseplate, or the discharge head. The nameplate provides information about the ATEX specifications of this pump.

Figure 3: Nameplate on the pump casing using English units

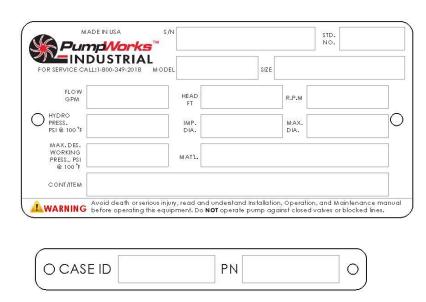


Table 5: Definition of nameplate on the pump casing english units

Nameplate field	Definition
IMPLR. DIA.	Trimmed Impeller diameter, in inches
MAX. DIA.	Maximum impeller diameter, in inches
GPM	Rated pump flow, in gallons per minute
FT HD	Rated pump head, in feet
RPM	Rated pump speed, revolutions per minute
MOD.	Pump model
SIZE	Size of the pump
STD. NO.	ANSI standard designation
MAT L. CONST.	Material of which the pump is constructed
SER. NO.	Serial number of the pump
MAX DSGN PSI @ 100ºF	Maximum pressure at 100°F according to the pump design

Figure 4: Nameplate on the pump casing using metric units

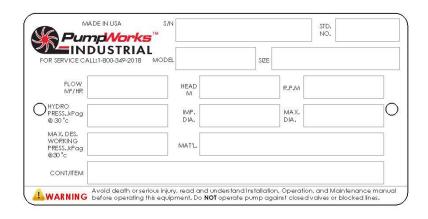


Table 6: Definition of nameplate on the pump casing in metric units

Nameplate field	Definition
IMPLR. DIA.	Impeller diameter, in mm
MAX. DIA.	Maximum impeller diameter, in mm
M³/HR	Rated pump flow, in cubic meters per hour
M HD	Rated pump head, in meters
RPM	Rated pump speed, in revolutions per minute
MOD.	Pump model
SIZE	Size of the pump
STD. NO.	ANSI standard designation
MAT L. CONST	Material of which the pump is constructed
SER. NO.	Serial number of the pump
MAX. DSGN Pressure kPag 30°C	Maximum Design Working Pressure @ 30°C

Figure 5: Nameplate on the bearing frame

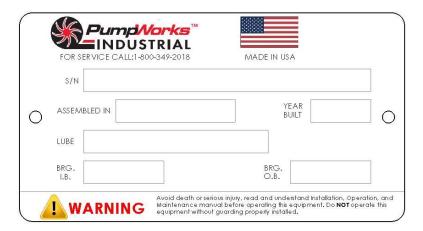


Table 7: Explanation of the nameplate on the Bearing Frame Assembly

Nameplate field	Definition
BRG. O. B.	Outboard bearing designation (Drive End)
BRG. I. B.	Inboard bearing designation (Non-Drive End)
S/N	Serial number of the Bearing Frame Assembly
LUBE	Oil or Grease Type

Transportation and Storage

Inspect the delivery

Inspect the package

- 1. Inspect the package for damaged or missing items upon delivery.
- 2. Note any damaged or missing items on the receipt and freight bill.
- 3. File a claim with the shipping company immediately if anything is out of order.

NOTE: Contact your local PW-IND sales office if any items are missing or for replacement components.

Inspect the pump unit

- 1. Inspect the product to determine if any parts have been damaged or are missing.
- 2. Note and report any evidence of damaged paint to your PW-IND representative. This might be evidence of impact damage during shipment that could result in reduced product performance.

Transportation guidelines

Pump handling



WARNING:

- Make sure that the unit cannot roll or fall over and injure people or damage property.
- PW-IND pumps contain sensitive parts that can be damaged if dropped or subjected to impact. Handle the equipment with care and do not attempt to install or operate a pump unit that is damaged.

Lifting methods



WARNING:

- All lifting must be done in compliance with all applicable regulations/standards.
- Assembled units and their components are heavy. Failure to properly lift and support this equipment can result in serious physical injury and/or equipment damage. Lift equipment only at the specifically identified lifting points.
- Crush hazard. The unit and the components can be heavy. Use proper lifting methods and wear steel-toed shoes at all times.
- Do not lift any pump or motor by attaching lifting equipment to shaft ends.

Table 1: Lifting Methods

Pump type	Lifting method
A bare pump without lifting handles	Use a suitable sling attached properly to solid points like the casing, the flanges, or the frames.
A base-mounted pump	Use slings under the pump casing and the drive unit, or under the base rails.
Mounted on a Polymer Composite Baseplate	See separate information regarding the Polymer Composite Baseplate.


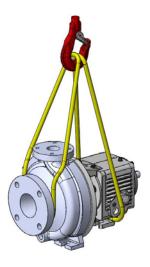


Figure 1: Example of Proper Lifting – Bare Pump

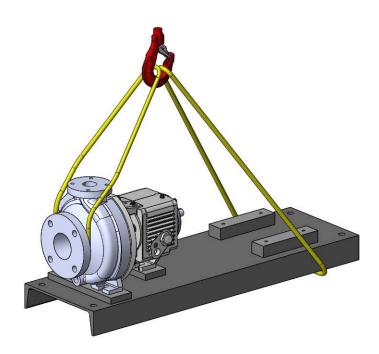


NOTICE

NOTICE:

Do not use this lifting method to lift a Polymer Composite Baseplate with the pump and motor mounted. Doing so may result in equipment damage.

Figure 2: Example of Proper Lifting – Base Mounted Pump

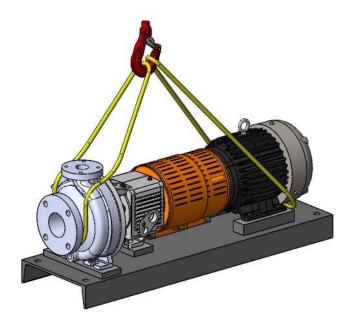

NOTICE

NOTICE:

Ensure that lifting strap is located at motor feet-frame, and clear of motor fan shroud prior to lifting.

NOTICE

NOTICE:

Do not use this lifting method to lift a Polymer Composite Baseplate with the pump and motor mounted. Doing so may result in equipment damage.

Figure 3: Example of Proper Lifting – Base Mounted Pump with Motor

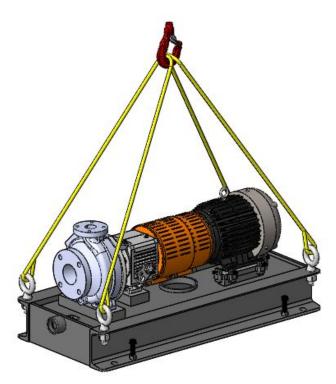


Figure 4: Example of Proper Lifting – Fabricated Base Mounted Pump with Motor

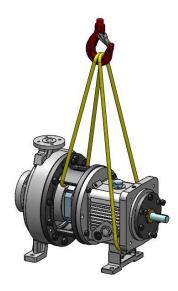


Figure 5: Example of Proper Lifting – Pump with Frame Adapter

Storage guidelines

Pump storage requirements

Storage requirements depend on the amount of time the pump unit will be stored prior to installation and start up. The normal packaging is designed only to protect the unit during shipping.

Table 2: Storage

Length of time in storage	Storage requirements
Upon receipt/short-term (less than six months)	Store in a covered and dry location.Store the unit free from dirt and vibration.
Long-term (more than six months)	 Store in a covered and dry location. Store the unit free from heat, dirt, and vibration. Rotate the shaft by hand several times at least every month ensuring that the shaft is not in the same position each time.

NOTICE

NOTICE:

Risk of damage to the mechanical seal or shaft sleeve on units supplied with cartridge mechanical seals. Follow seal manufacture's recommendations for long term storage.

Treat bearing and machined surfaces so that they are well preserved. Refer to motor and coupling manufacturers for their long-term storage procedures.

Long term storage preparation is available as part of initial product purchase or after your pump has been delivered. Contact your local PW-IND sales representative.

Frostproofing

Table 3: Situations when the pump is or is not frostproof

Situation	Condition
Operating	The pump is frostproof.
Not Operating	The pump internals might be subject to frost damage. Protect non-operational units with climate control or an anti-freeze solution in the casing. NEVER USE AN ANTI-FREEZE AGENT IN THE PUMP BEARING HOUSING.

Installation

Precautions



WARNING:

- When installing in a potentially explosive environment, make sure that the motor and other electrical equipment are properly rated for the area of classification.
- You must ground all electrical equipment. This applies to the pump equipment, the driver, and any monitoring equipment. Test the ground lead to verify that it is connected correctly.
- Electrical Connections must be made by certified electricians in compliance with all international, national, state, and local rules.



NOTICE:

Supervision by an authorized PWA-IND representative is recommended to ensure proper installation. Failure to do so may result in equipment damage.

Pump location guidelines

Table 1: Guidelines for locations

Guideline	Explanation/comment
Keep the pump as close to the liquid source as possible.	This minimizes friction loss and keeps the suction piping as short as possible.
Make sure that the space around the pump is sufficient.	This facilitates ventilation, inspection, maintenance, and service.
tackle, make sure that there is enough space above	This makes it easier to properly use the lifting equipment and safely remove and relocate the components to a safe
	The best pump location for noise and vibration absorption is on a concrete floor.

Foundation requirements

Requirements

- The foundation must form a permanent, rigid support for the unit.
- The location and size of the foundation fasteners should be in accordance with those shown on the construction drawing provided with the pump data package.
- The foundation must weigh between three and five times the weight of the entire pump package.
- Ensure foundation is level and free of discontinuity to prevent distortion when foundation bolts are tightened.
 - 1. Baseplate
 - 2. Shims or wedges
 - 3. Foundation
 - 4. Sleeve
 - 5. Form
 - 6. Bolt

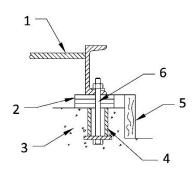


Figure 1: Sleeve-type bolts

- 1. Baseplate
- 2. Shims or wedges
- 3. Foundation
- 4. Form
- 5. Bolt

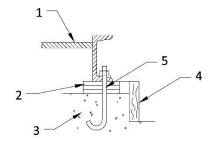


Figure 2: J-type bolts

Baseplate mounting procedures Prepare the baseplate for mounting

- 1. Remove the pump and motor from the baseplate.
- 2. Clean the underside of the baseplate completely.
- 3. If applicable, coat the underside of the baseplate with a re-coatable epoxy primer.
 - Use an epoxy primer only if you will be using an epoxy-based grout.
- 4. Remove the rust-proof coating from the machined mounting pads using an appropriate solvent.
- 5. Remove water and debris from the foundation-bolt holes.


Install the baseplate using shims

Required tools:

- Two sets of shims for each foundation bolt
- Two machinist's levels


This procedure is applicable to fabricated steel baseplates.

- 1. If you use sleeve-type bolts, fill the bolt sleeves with packing material or rags to prevent grout from entering the bolt sleeves.
- Set shims on each side of each foundation bolt.
 The shims should have a height of between 0.75 in. (19 mm) and 1.50 in (38mm).

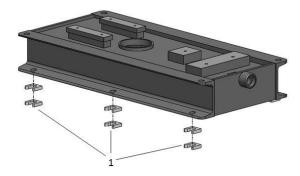

1. Shims

Figure 3: Top view

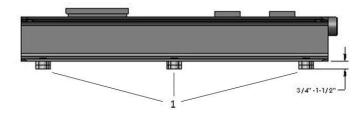

1. Shims

Figure 4: Side view

- 3. Lower the baseplate carefully onto the foundation bolts.
- 4. Set the machinist's levels across the mounting pads of the driver and the mounting pads of the pump.



NOTICE:

Remove all dirt from the mounting pads in order to make sure that you achieve the correct level indication.

- 5. Level the baseplate both lengthwise and across by adding or removing shims. The correct level measurement is a maximum of 0.005 in./ft (400 micrometers/m).
- 6. Hand-tighten the foundation bolts.

Install the baseplate using jackscrews

Tools required:

- Anti-seize compound
- Jackscrews
- Bar stock
- Two machinist's levels

This procedure is applicable to the Fabricated Steel $\it PLUS$ baseplate and the Polymer Composite Baseplate

- 1. Apply an anti-seize compound on the jackscrews.

 The compound makes it easier to remove the screws after grouting.
- 2. Lower the baseplate carefully onto the foundation bolts and perform these steps:
 - a) Cut plates from bar stock and chamfer the edges of the plates in order to reduce stress concentrations.
 - b) Put the plates between the jackscrews and the foundation surface.
 - Use the jackscrews to raise the baseplate above the foundation.
 For grouted installations, make sure that the distance between the baseplate and the foundation surface is between 0.75 in. (19 mm) and 1.50 in. (38 mm).

For non-grouted installations, the baseplate should be raised the minimum distance required for leveling.

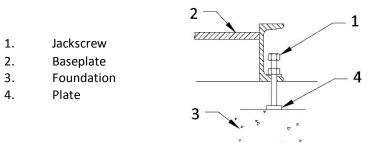


Figure 5: Jackscrew bolts

3. Level the driver mounting pads:

The correct level measurement is a maximum of 0.005 in./ft (400 micrometers/m).

NOTICE

NOTICE:

Remove all dirt from the mounting pads in order to make sure that you achieve the correct level indication.

The correct level measurement is a maximum of 0.005 in./ft (400 micrometers/m).

- a) Put one machinist's level lengthwise on one of the two pads.
- b) Put the other machinist's level across the ends of the two pads.
- c) Level the pads by adjusting the four jackscrews in the corners.

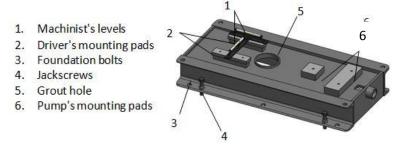


Figure 6: Leveling baseplate - motor pads

4. Level the pump mounting pads.

The correct level measurement is a maximum of 0.005 in./ft (400 micrometers/m).

- a) Put one machinist's level lengthwise on one of the two pads.
- b) Put the other level across the center of the two pads.
- c) Level the pads by adjusting the four jackscrews in the corners.

 Make sure that the machinist's level readings are as close to zero as possible, both lengthwise and across.

- 1. Driver's mounting pads
- 2. Machinist's levels
- 3. Foundation bolts
- 4. Jackscrews
- 5. Grout hole
- 6. Pump's mounting pads

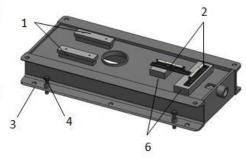


Figure 7: Leveling baseplate - pump pads

- 5. Hand-tighten the nuts for the foundation bolts.
- 6. Check that the driver's mounting pads are level and adjust the jackscrews and the foundation bolts if necessary.

Grout the baseplate

Required equipment:

- Cleaners: Do not use an oil-based cleaner because the grout will not bond to it. See the instructions provided by the grout manufacturer.
- Grout: Non-shrink grout is recommended.
- 1. Clean all the areas of the baseplate that will come into contact with the grout.
- 2. Build a form around the foundation.
- 3. Refer to API 686 and grout manufactures installation instructions.
- 4. Pour grout through the grout hole into the baseplate up to the level of the form.

When you pour the grout, remove air bubbles by using one of these methods.

- Refer to API 686 and grout manufactures installation instructions.
- 5. Allow the grout to set 48 hours.
 - 1. Baseplate
 - 2. Shims or wedges
 - 3. Grout
 - 4. Foundation
 - 5. Sleeve
 - 6. Form
 - 7. Bolt

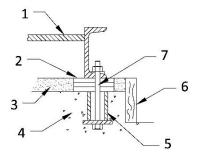


Figure 8: Initial Grout

- 6. Fill the remainder of the baseplate with grout, and allow the grout to set for at least 48 hours.
 - 1. Baseplate
 - 2. Grout
 - 3. Foundation
 - 4. Form
 - 5. Bolt

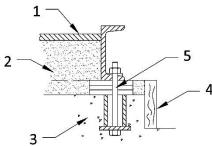


Figure 9: Final Grout

- 7. Refer to the grout manufacturer's instructions for tightening the foundation bolts. Over tightening the foundation bolts before proper cure can damage the grout and distort the baseplate.
- 8. Ping test baseplate for voids. Where voids are located, drill and tap an air release hole and an opposing hole. Tap and thread opposing hole with zirc fitting and gently fill void with grout.



WARNING:

• Always re-confirm baseplate level AFTER GROUTING per the procedure in this section prior to re-installing the pump and motor.

Install the pump, driver, and coupling

- 1. Mount and fasten the pump on the baseplate. Use appropriate bolts.
- 2. Mount the driver on the baseplate. Use appropriate bolts and hand tighten.
- Install the coupling.
 (See the installation instructions from the coupling manufacturer.)

Pump-to-driveralignment

Precautions



WARNING:

- Follow shaft alignment procedures in order to prevent catastrophic failure of drive components or unintended contact of rotating parts. Follow the coupling installation and operation procedures from the coupling manufacturer.
- Always disconnect and lock out power all potential energy sources (electrical, hydraulic, pneumatic, etc.) before you perform any installation maintenance tasks. Failure to do so will result in serious physical injury.
- Refer to driver/coupling/gear manufacturers installation and operation manuals (IOM) for specific instructions and recommendations.



NOTICE:

Each PW-IND complete pump package is factory aligned to ensure assembly integrity. It is the user's responsibility to perform a final alignment before start <u>up.</u>

Alignment checks

When to perform alignment checks

Additional alignment checks are REQUIRED when:

- The process temperature changes.
- The piping changes.
- The pump has been serviced.

Types of alignment checks

Table 2: Alignment checks

Type of alignment	When to perform
	Prior to operation when the pump and the driver are at ambient temperature.
• • • • • •	After operation when the pump and the driver are at operating temperature.

Initial alignment (cold alignment)

Table 3: Initial alignment - cold

When	Why
Before you grout the baseplate	This ensures that alignment can be accomplished.
After you grout the baseplate	This ensures that no changes have occurred during the grouting process.
After you connect the piping	This ensures that pipe strains have not altered the alignment. If changes have occurred, you must alter the piping to remove pipe strains on the pump flanges.

Final alignment (hot alignment)

Table 4: Final alignment - hot

When	Why
After the first run	This ensures correct alignment when both the pump and the driver are at operating temperature.
Periodically	This follows the plant operating procedures

Permitted indicator values for alignment checks



NOTICE:

The specified permitted reading values are valid only at operating temperature. For cold settings, other values are permitted. You must use the correct tolerances. Failure to do so can result in misalignment and reduced pump reliability.

When dial indicators are used to check the final alignment, the pump and drive unit are correctly aligned when these conditions are true:

- The total indicator runout (TIR) is a maximum of 0.002 in. (0.05 mm) parallel offset at operating temperature.
- The tolerance of the indicator is 0.0005 in./in. (0.0127 mm/mm) angularity of indicator separation at operating temperature.

Cold settings for parallel vertical alignment

A vertical offset of the pump driver is required during the cold alignment process. Consult the driver installation manual or your PW-IND representative for the proper vertical offset.

Alignment measurement guidelines


Table 5: Measurement guidelines

Guideline	Explanation
Rotate the pump coupling half and the driver coupling half together so that the indicator rods have contact with the same points on the driver coupling half.	This prevents incorrect measurement.
Move or shim only the driver in order to make adjustments. Avoid shimming the pump feet.	This prevents strain on the piping installations.
Make sure that the hold-down bolts for the driver feet are tight when you take indicator measurements.	This keeps the driver stationary since movement causes incorrect measurement.
Make sure that the hold-down bolts for the driver feet are loose before you make alignment corrections.	This makes it possible to move the driver when you make alignment corrections.
Check the alignment again after any mechanical adjustments.	This corrects any misalignments that an adjustment may have caused.

Attach the dial indicators for alignment

You must have two dial indicators in order to complete this procedure.

- 1. Attach two dial indicators on the pump coupling half (X):
 - a) Attach one indicator (P) so that the indicator rod comes into contact with the perimeter of the driver coupling half (Y).
 This indicator is used to measure parallel misalignment.
 - b) Attach the other indicator (A) so that the indicator rod comes into contact with the inner end of the driver coupling half.

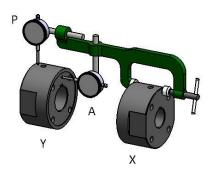

- P = Parallel Reading
- A = Angular Reading
- X = Motor Hub
- Y = Pump Hub

Figure 10: Dial indicator alignment

- 2. Rotate the pump coupling half (X) in order to check that the indicators are in contact with the driver coupling half (Y) but do not bottom out.
- 3. Adjust the indicators if necessary.

Pump-to-driver alignment instructions

Perform angular alignment for a vertical correction

- 1. Set the angular alignment indicator to zero at the top-center position (12 o'clock) of the driver coupling half (Y).
- 2. Rotate the indicator to the bottom-center position (6 o'clock).
- 3. Record the indicator reading.

Table 6: Angular alignment for vertical correction guidelines

When the reading value is	Then
Negative	The coupling halves are farther apart at the bottom than at the top. Perform one of these steps: • Add shims in order to raise the feet of the driver at the shaft end. • Remove shims in order to lower the feet of the driver at the other end.
Positive	The coupling halves are closer at the bottom than at the top. Perform one of these steps: Remove shims in order to lower the feet of the driver at the shaft end. Add shims in order to raise the feet of the driver at the other end.

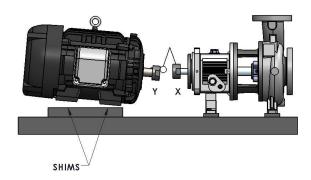


Figure 11: Side view of an incorrect vertical alignment

4. Repeat the previous steps until the permitted reading value is achieved.

Perform angular alignment for a horizontal correction

- 1. Set the angular alignment indicator (A) to zero on left side of the driver coupling half (Y), 90° from the top-center position (9 o'clock).
- 2. Rotate the indicator through the top-center position to the right side, 180° from the start position (3 o'clock).
- 3. Record the indicator reading.

Table 7: Angular alignment horizontal correction guidelines

When the reading value is	Then
Negative	The coupling halves are farther apart on the right side than the left. Perform one of these steps: Slide the shaft end of the driver to the left. Slide the opposite end to the right.
Positive	The coupling halves are closer together on the right side than the left. Perform one of these steps: Slide the shaft end of the driver to the right. Slide the opposite end to the left.

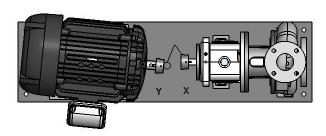


Figure 12: Top view of an incorrect horizontal alignment

4. Repeat the previous steps until the permitted reading value is achieved.

Perform parallel alignment for a vertical correction

A unit is in parallel alignment when the parallel indicator (P) does not vary by more than 0.002 in. (0.05 mm) as measured at four points 90° apart at the operating temperature.

- 1. Set the parallel alignment indicator (P) to zero at the top-center position (12 o'clock) of the driver coupling half (Y).
- 2. Rotate the indicator to the bottom-center position (6 o'clock).
- 3. Record the indicator reading.

Table 8: Parallel alignment for vertical correction guidelines

When the reading value is	Then
Negative	The pump coupling half (X) is lower than the driver coupling half (Y). Remove shims of a thickness equal to half of the indicator reading value under each driver foot.
Positive	The pump coupling half (X) is higher than the driver coupling half (Y). Add shims of a thickness equal to half of the indicator reading value to each driver foot.

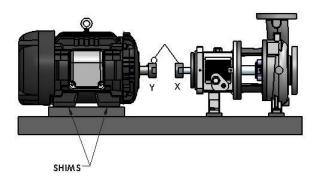


Figure 13: Side view of an correct vertical alignment

Repeat the previous steps until the permitted reading value is achieved.

NOTICE

NOTICE:

The specified permitted reading values are only valid at operating temperatures. For cold settings, other values are permitted. You must use the correct alignment tolerance. Failure to do so can result in misalignment and reduced pump reliability.

Perform parallel alignment for a horizontal correction

A unit is in parallel alignment when the parallel indicator (P) does not vary by more than 0.002 in. (0.05 mm) as measured at four points 90° apart at the operating temperature.

- 1. Set the parallel alignment indicator (P) to zero on the left side of the driver coupling half (Y), 90° from the top-center position (9 o'clock).
- 2. Rotate the indicator through the top-center position to the right side, 180° from the start position (3 o'clock).
- 3. Record the indicator reading.

Table 9: Parallel alignment for horizontal correction guidelines

When the reading value is	Then
Negative	The driver coupling half (Y) is to the left of the pump coupling half (X).
Positive	The driver coupling half (Y) is to the right of the pump coupling half (X).

NOTICE

Make sure to slide the driver evenly. Failure to do so can negatively affect horizontal angular correction.

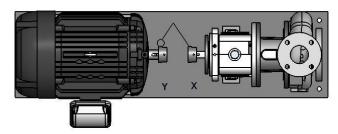


Figure 14: Top view of a correct horizontal alignment

4. Repeat the previous steps until the permitted reading value is achieved

NOTICE:

The specified permitted reading values are valid only at operating temperature. For cold settings, other values are permitted. You must use the correct alignment tolerances. Failure to do so can result in misalignment and reduced pump reliability.

Perform complete alignment for a vertical correction

A unit is in complete alignment when both the angular indicator (A) and the parallel indicator (P) do not vary by more than 0.002 in. (0.05 mm) as measured at four points 90° apart.

- 1. Set the angular and parallel dial indicators to zero at the top-center position (12 o'clock) of the driver coupling half (Y).
- 2. Rotate the indicators to the bottom-center position (6 o'clock).
- 3. Record the indicator readings.
- 4. Make corrections according to the separate instructions for angular and parallel alignment until you obtain the permitted reading values.

Perform complete alignment for a horizontal correction

A unit is in complete alignment when both the angular indicator (A) and the parallel indicator (P) do not vary by more than 0.002 in. (0.05 mm) as measured at four points 90° apart.

- 1. Set the angular and parallel dial indicators to zero at the left side of the driver coupling half (Y), 90° from the top-center position (9 o'clock).
- 2. Rotate the indicators through the top-center position to the right side, 180° from the start position (3 o'clock).
- 3. Record the indicator readings.
- 4. Make corrections according to the separate instructions for angular and parallel alignment until you obtain the permitted reading values.

Piping checklists General piping checklist

Precautions



CAUTION:

- Never draw piping into place by using force at the flanged connections of the pump. This can impose dangerous strains on the unit and cause misalignment between the pump and driver. Pipe strain adversely affects the operation of the pump, which results in physical injury and damage to the equipment.
- Vary the capacity with the regulating valve in the discharge line. Never throttle the flow from the suction side. This action can result in decreased performance, unexpected heat generation, and equipment damage.

Piping guidelines


 $\label{lem:condition} \textbf{Guidelines for piping are given in the Hydraulic Institute Standards}$

Checklist

Table 10: Piping guidelines

Check	Explanation/comment	Checked
Check that all piping is supported independently of, and lined up naturally with, the pump flange.	 This helps to prevent: Strain on the pump Misalignment between the pump and the drive unit Wear on the pump bearings and the coupling Wear on the pump bearings, seal, and shafting 	
Keep the piping as short as possible.	This helps to minimize friction losses.	
Check that only necessary fittings are used.	This helps to minimize friction losses.	
Do not connect the piping to the pump until: The grout for the baseplate or sub-base becomes hard. The hold-down bolts for the pump and the driver are tightened.	_	
Make sure that all the piping joints and fittings are airtight.	This prevents air from entering the piping system or leaks that occur during	
If the pump handles corrosive fluids, make sure that the piping allows you to flush out the liquid before you remove the pump.		
If the pump handles liquids at elevated temperatures, make sure that the expansion loops and joints are properly installed.	This helps to prevent misalignment due to linear expansion of the piping.	
Pump flange and piping flange face alignment and separation.	 The pump and piping flange faces shall be parallel to a min. of .001 in./in. (10 micrometers/cm) of outer flange diameter. Flange face separation, including single gasket spacing, shall be 1/16" (1.5 mm). 	

Example: Installation for expansion

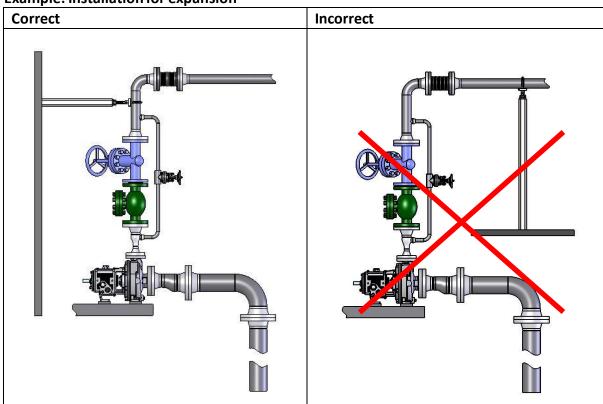

Fastening



WARNING:

- Only use fasteners of the proper size and material.
- Replace all corroded fasteners.
- Make sure that all fasteners are properly tightened and that there are no missing fasteners.

Suction piping checklist

Performance curve reference

Net positive suction head available (NPSH $_A$) must always exceed NPSH required (NPSH $_R$ or NPSH $_3$) as shown on the published performance curve of the pump.

Suction-piping checks

Table 11: Suction piping guidelines

Check	Explanation/comment	Checked
Check that the distance between the inlet flange of the pump and the closest bend is at least five pipe diameters.	This minimizes the risk of cavitation in the suction inlet of the pump due to turbulence. See the Example sections for illustrations.	
Check that component or pipe diameter change in general do not have sharp bends.	See the Example sections for illustrations.	

Check that the suction piping is one or two sizes larger than the suction inlet of the pump. Install an eccentric reducer between the pump inlet and the suction piping.	The suction piping must never have a smaller diameter than the suction inlet of the pump. See the Example sections for illustrations.	
Check that the eccentric reducer at the suction flange of the pump has the following properties: Sloping side down Horizontal side at the top	See the example illustrations.	
When suction strainers or suction bells are used, check that they are at least three times the area of the suction piping.	Suction strainers help to prevent clogging. Mesh holes with a minimum diameter of 1/16 in. (1.6 mm) are recommended.	
If more than one pump operates from the same liquid source, check that separate suction-piping lines are used for each pump.	This recommendation helps you to achieve a higher pump performance.	
If necessary, make sure that the suction piping includes a drain valve and that it is correctly installed.		

Liquid source below the pump

Table 12: Suction piping guidelines – Liquid source below pump

Check	Explanation/comment	Checked
Make sure that the suction piping is free from air pockets.	This helps to prevent the occurrence of air and cavitation in the pump inlet.	
Check that the suction piping slopes upwards from the liquid source to the pump inlet.	This prevents air from accumulating in the suction piping.	
If the pump is not self-priming, check that a device for priming the pump is installed.	Use a foot valve with a diameter that is at least equivalent to the diameter of the suction piping. End user must accommodate for foot valve friction losses in priming & suction calculations.	


Liquid source above the pump

Table 13: Suction piping guidelines – Liquid source above pump


Check	Explanation/comment	Checked
Check that an isolation valve is installed in the suction piping at a distance of at least two times the pipe diameter from the suction inlet.	This permits you to close the line during pump inspection and maintenance. Do not use the isolation valve to throttle the pump. Throttling can cause these problems: Loss of priming Excessive temperatures Damage to the pump Voiding the warranty	
Make sure that the suction piping is free from vapor pockets.	This helps to prevent the occurrence of vapors and cavitation in the pump inlet.	
Check that the piping is level or slopes downward from the liquid source.	_	

Make sure that no part of the suction piping extends below the suction flange of the pump.	_	
	This prevents air from entering the pump through a suction vortex.	

Example: Elbow close to the pump suction inlet

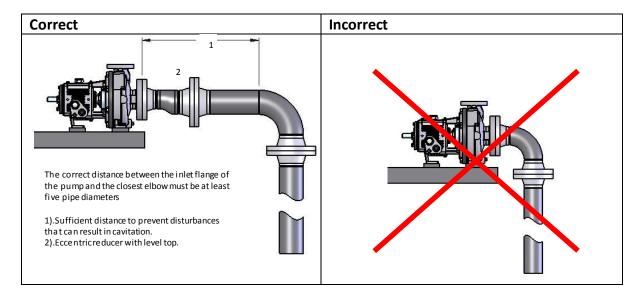

Example: Suction piping below pump

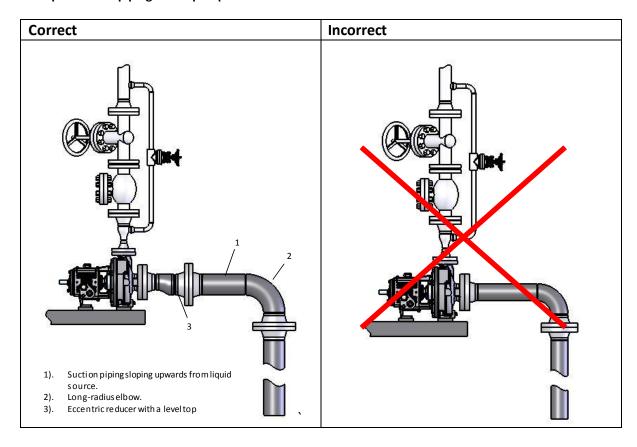


Discharge piping checklist

Table 14: Discharge piping guidelines

Check	Explanation/comment	Checked
Check that an isolation valve is installed in the discharge line.	The isolation valve is required for: Priming Regulation of flow Inspection and maintenance of the pump See Example: Discharge piping equipment for illustrations.	
Check that a check valve is installed in the discharge line, between the isolation valve and the pump discharge outlet.	The location between the isolation valve and the pump allows inspection of the check valve. The check valve prevents damage to the pump and seal due to back flow through the pump when the drive unit is shut off. See Example: Discharge piping equipment for illustrations.	
If increasers are used, check that they are installed between the pump and the check valve.	See Example: Discharge piping equipment for illustrations.	
If quick-closing valves are installed in the system, check that cushioning devices are used.	This protects the pump from surges and water hammer.	

Example: Discharge piping

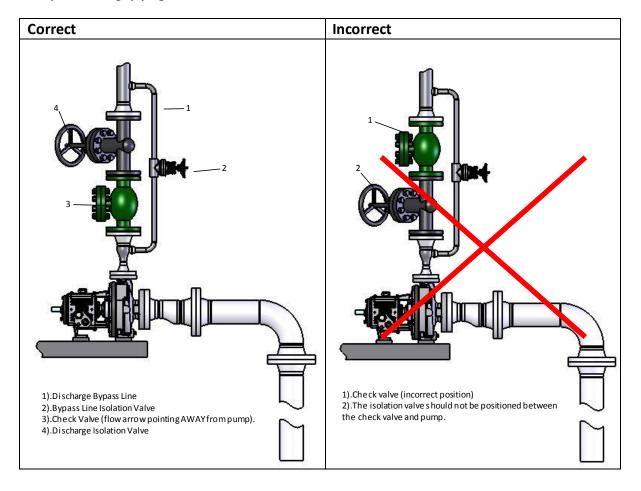

Commissioning, Startup, Operation, and Shutdown

Preparation for startup



WARNING:

- Failure to follow these precautions before you start-up the pump could lead to serious injury and equipment failure.
- Do not operate the pump below the minimum rated flow or with the suction or discharge valves closed.
- Avoid death or serious injury. Leaking fluid can cause fire and/or burns. Operating the
 pump above maximum rated flow shown on the pump curve leading to an increase in
 horsepower and vibration along with mechanical seal and/or shaft failure.
- Never operate the pump without the coupling guard correctly installed.
- Always disconnect and lock out all potential energy sources (electrical, hydraulic, pneumatic, etc) before you perform any installation or maintenance tasks. Failure to disconnect and lock out driver power could result in serious physical injury.
- Operating the pump in reverse rotation will result in the contact of metal parts, heat generation, and breach of containment.

Precautions



NOTICE:

- Verify the driver settings before you start any pump.
- Make sure that the pump casing warm-up rate does not exceed 5°F (2.8°C) per minute.
- Risk of damage to the mechanical seal or shaft sleeve on units supplied with cartridge mechanical seals. Prior to startup, make sure to tighten the set screws in the seal locking collar and remove the centering clips.

You must follow these precautions before you start the pump:

- Flush and clean the system thoroughly prior to start-up to remove dirt or debris in the pipe system.
- If temperatures of the pumped fluid will exceed 200°F (93°C), then warm up the pump prior to operation. Circulate a small amount of fluid through the pump until the casing temperature is within 50°F (10°C) of the process fluid temperature. Soak for (2) hours at process fluid temperature.

Remove the coupling guard

- 1. Remove the nut, bolt, and washers from the slotted hole in the center of the coupling guard.
- 2. Slide the driver half of the coupling guard toward the pump.

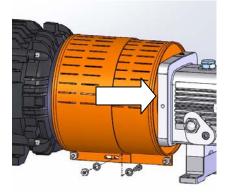


Figure 1: Guard removal – slide driver half

- 3. Remove the nut, bolt, and washers from the driver half of the coupling guard.
- 4. Remove the driver-side end plate.

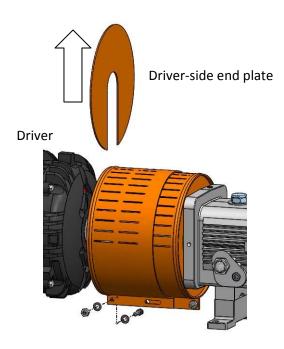


Figure 2: Guard removal – driver side end plate

- 5. Remove the driver half of the coupling guard:
 - a) Slightly spread the bottom apart.
 - b) Lift upwards.

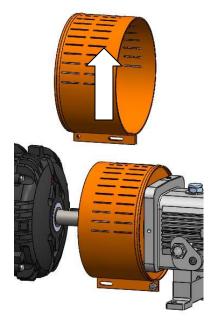


Figure 3: Guard removal -driver half

- 6. Remove the remaining nut, bolt, and washers from the pump half of the coupling guard. It is not necessary to remove the end plate from the pump side of the bearing housing. You can access the bearing-housing tap bolts without removing this end plate if maintenance of internal pump parts is necessary.
- 7. Remove the pump half of the coupling guard:
 - a) Spread the bottom of the guard apart
 - b) Lift upwards

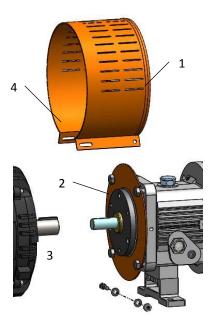


Figure 4: Guard removal – pump half

- 1. Annular groove
- 2. Pump-side end plate
- 3. Driver
- 4. Pump half of the coupling guard

Check the rotation - Frame Mounted



WARNING:

- Operating the pump in reverse rotation will result in the contact of metal parts, heat generation, and breach of containment.
- Always disconnect and lock out all potential energy sources (electrical, hydraulic, pneumatic, etc) before you perform any installation or maintenance tasks. Failure to do so could result in serious physical injury.
- 1. Lock out power to all potential energy sources (electric, hydraulic, pneumatic, etc.).
- 2. Make sure that the coupling hubs are fastened securely to the shafts.
- 3. Make sure that the coupling spacer is removed. The pump ships with the coupling spacer removed.
- 4. Unlock power to the driver.
- 5. Make sure that everyone is clear, and then operate the driver long enough to determine that the direction of rotation corresponds to the arrow on the bearing housing or close coupled frame.

Impeller-clearance check

The impeller-clearance check ensures the following:

- The pump turns freely.
- The pump operates at optimal efficiency for long equipment life.

Impeller clearances (PWA-LF)



WARNING:

For pumpage temperatures greater than 200°F (93°C), you must increase the cold (ambient) setting according to this table. Doing so prevents the impeller from contacting the casing due to differential expansion from the higher operating temperatures. Failure to do so may result in equipment damage.

NOTICE:

Do not set the maximum impeller setting to more than 0.005 in. (0.13 mm) greater than the values in this table. Doing so may result in a significant decrease in performance.

Table 1: Impeller clearances

Service temperature	Group 1, 2, 3 in. (mm)	
-20 to 200°F (-29 to93°C)	0.015 (0.38)	
Up to 250°F (121°C)	0.016 (0.41)	
Up to 300°F (149°C)	0.017 (0.43)	
Up to 350°F (177°C)	0.019 (0.48)	
Up to 400°F (204°C)	0.020 (0.50)	
Up to 450°F (232°C)	0.021 (0.53)	
Up to 500°F (260°C)	0.022 (0.56)	
Up to 550°F (288°C)	0.023 (0.58)	
Up to 600°F (316°C)	0.024 (0.61)	
Up to 650°F (343°C)	0.026 (0.66)	
Up to 700°F (371°C)	0.027 (0.69)	

Impeller-clearance setting

Importance of a proper impeller clearance



WARNING:

- The impeller clearance setting procedure must be followed. Improperly setting the clearance or not following any of the proper procedures can result in equipment damage.
- If you use a cartridge mechanical seal, you must install the centering clips and loosen the set screws before you set the impeller clearance. Failure to do so could result in mechanical seal damage.

Impeller clearance methods

You can set the impeller clearance with either of these methods.

- Dial indicator method
- Feeler gauge method

Set the impeller clearance - dial indicator method



WARNING:

Always disconnect and lock out all potential energy sources (electric, hydraulic, pneumatic, etc) before you perform any installation or maintenance tasks. Failure to do so will result in serious physical injury.

- 1. Remove the coupling guard.
- 2. Set the indicator so that the button contacts either the shaft end or the face of the coupling.

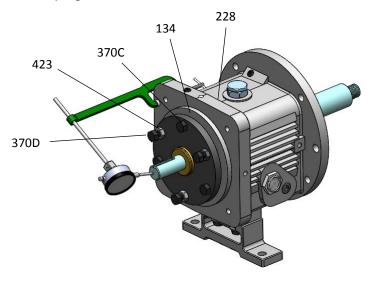


Figure 5: Mounting Indicator

- 3. Loosen the jam nuts (423) on the jack bolts (370D), and then back the bolts out about two turns.
- 4. Tighten the clamp bolts evenly (370C), bringing the bearing housing (134) towards the frame (228) until the impeller contacts the casing.
- 5. Turn the shaft in the direction of pump operation to ensure that there is slight contact between the impeller and the casing.
- 6. Set the indicator to zero and loosen the clamp bolt (370C) about one turn.
- 7. Thread in the jack bolts (370D) until the jack bolts evenly contact the bearing frame
- 8. Tighten the jack bolts evenly about one flat at a time, moving the bearing housing (134) away from the bearing frame until the indicator shows the correct clearance. Refer to the impeller clearance table to determine the correct clearance.
- 9. Tighten the bolts evenly in this order:
 - a) Tighten the clamp bolts (370C).
 - b) Tighten the jack bolts (370D).
 - c) Tighten jam nut (423)
 - Make sure to keep the indicator reading at the proper setting.
- 10. Make sure the shaft turns freely.

Set the impeller clearance - feeler gauge method



WARNING:

Always disconnect and lock out all potential energy sources (electric, hydraulic, pneumatic, etc) before you perform any installation or maintenance tasks. Failure to do so will result in serious physical injury.

- Refer to driver/coupling/gear manufacturers installation and operation manuals (IOM) for specific instructions and recommendations.
- 1. Remove the coupling guard.
- 2. Loosen the jam nuts (423B) on the jack bolts (370D), and then back the bolts out about two turns.

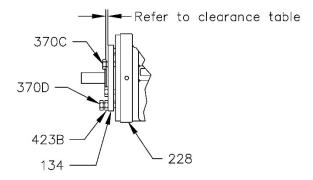


Figure 6: Setting Impeller Clearance

- 3. Evenly tighten the clamp bolts (370C), bringing the bearing housing (134) towards the frame (228) until the impeller contacts the casing.
- 4. Turn the shaft in direction of rotation to ensure that there is slight contact between the impeller and the casing.
- Use a feeler gauge to set the gap between the three clamp bolts (370C) and the bearing housing (134) to the correct impeller clearance.
 Refer to the impeller clearance table to determine the correct clearance.
- 6. Use the three jack bolts (370D) to evenly move the bearing housing (134) until it contacts the clamp bolts (370C).
- 7. Evenly tighten the jam nuts (423B).
- 8. Make sure the shaft turns freely.

Couple the pump and driver



WARNING:

Always disconnect and lock out power to all potential energy sources (electric, hydraulic, pneumatic, etc.) before you perform any installation maintenance tasks. Failure to do so will result in serious physical injury.

Install the coupling guard



WARNING:

- Never operate a pump without a properly installed coupling guard.
 Personal injury will occur if you run the pump without a coupling guard.
- Refer to driver/coupling/gear manufacturers IOM for specific instructions and recommendations.
- Always disconnect and lock out power to all potential energy sources (electric, hydraulic, pneumatic, etc.) before you perform any installation or maintenance tasks. Failure to disconnect and lock out driver power will result in serious physical injury.

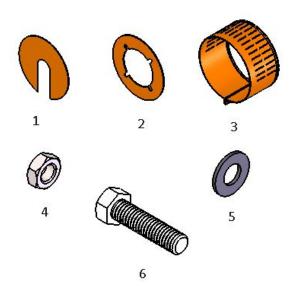


Figure 7: Required guard parts

- 1. End plate, drive end
- 2. End plate, pump end
- 3. Guard half, 2 required
- 4. 3/8-16 nut, 3 required
- 5. 3/8 in. washer, 6 required
- 6. 3/8-16 x 2 in. hex head bolt, 3 required
- 1. Follow appropriate lock out/tag out procedures: De-energize the motor, place the motor in a locked-out position, and place a caution tag at the starter that indicates the disconnect.
- Put the pump-side end plate in place.
 If the pump-side end plate is already in place, make any necessary coupling adjustments and then proceed to the next step.

Table 2: Group - Guard Installation guidelines

Pump size	Guideline
Group 1, 2, 3	Align the pump-side end plate to the bearing frame. You do not need to adjust the impeller.

- 3. Put the pump-half of the coupling guard in place:
 - a) Slightly spread the bottom apart.
 - b) Place the coupling guard half over the pump-side end plate.

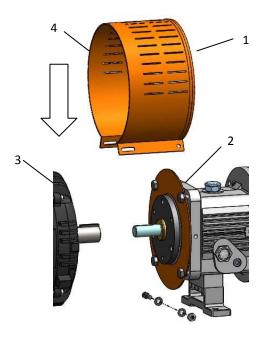


Figure 8: Guard install – slide pump half

- 1. Annular groove
- 2. Pump-side end plate
- 3. Driver
- 4. Pump half of the coupling guard

The annular groove in the coupling guard half must fit around the end plate.

- 4. Use a bolt, a nut, and two washers to secure the coupling guard half to the end plate. Tighten securely.
- 5. Put the driver half of the coupling guard in place.
 - a) Slightly spread the bottom apart.
 - b) Place the driver half of the coupling guard over the pump half of the coupling guard. The annular groove in the coupling guard half must face the motor.

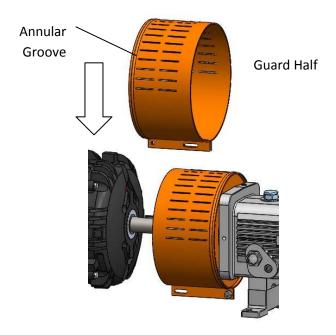


Figure 9: Guard install - slide motor half

6. Place the driver-side end plate over the motor shaft.

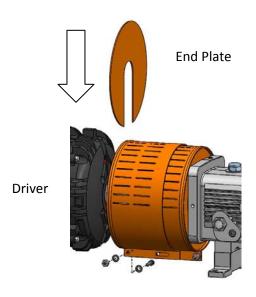


Figure 10: Guard install - slide end plate

- 7. Place the driver-side end plate in the annular groove of the driver-half of the coupling guard.
- 8. Use a bolt, a nut, and two washers to secure the coupling guard half to the end plate. Hand-tighten only.
 - The hole is located on the driver-side of the coupling guard half.
- 9. Slide the driver-half of the coupling guard towards the motor so that the coupling guard completely covers the shafts and coupling.

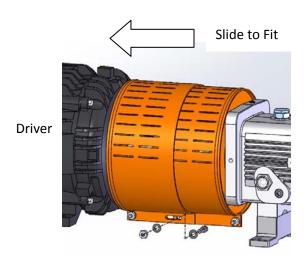


Figure 11: Guard Install – slide motor half to fit

- 10. Use a nut, a bolt, and two washers to secure the coupling guard halves together.
- 11. Tighten all nuts on the guard assembly.

Bearing lubrication



WARNING:

Make sure to properly lubricate the bearings. Failure to do so can result in premature failure.

The PW-IND Model PWA-LF bearings are lubricated by an OIL FLINGER. Oil Level must be maintained at the center of the power end sight glass.



NOTE:

Pumps are shipped without oil. You must lubricate oil-lubricated bearings at the time of start-up

Lubricating Oil Fill Capacities

Table 3: Lubrication capacity requirements

Frame	Qts.	Oz.	ml
Group 1	0.5	14.5	429
Group 2	1.0	30	887
Group 3	0.75	24	710

Lubricating-oil requirements

Oil requirements based on temperature

Table 4: Oil requirements based on temperature

Temperature	Oil requirement
Pumped Fluid Temperatures below 350°F	Use ISO VG 68
Pumped-fluid temperatures exceed 350°F (177°C)	Use synthetic lubrication ISO VG 100. Use PWA-LF Water Cooling Coil

Acceptable oil for lubricating bearings

Acceptable lubricants

Table 5: Examples of acceptable high quality turbine oils with rust and oxidation inhibitors.

Brand	Lubricant type
Chevron	GTS Oil 68
Exxon	Teresstic EP 68
Mobil	DTE 26 300 SSU @ 100°F (38°C)
Philips	Mangus Oil 315
Shell	Tellus Oil 68
Sunoco	Sunvis 968
Royal Purple	SYNFILM ISO VG 68 Synthetic Lube

Lubricate the bearings with oil

- 1. Remove the vent cap.
- 2. Fill the bearing frame with oil through the vent / filler connection, which is located on top of the bearing frame.

Fill the bearing frame with oil until the oil level reaches the middle of the sight glass (319).

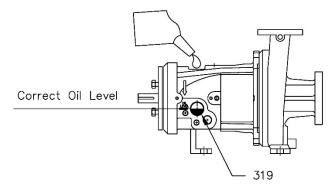


Figure 12: Power End - lube fill

3. Replace the fill plug.

Lubricate the bearings with pure oil mist

Oil mist is an optional feature for this pump.

To lubricate bearings with pure oil mist, follow the instructions provided by the manufacturer of the oil-mist generator.

The inlet connections are on the top of the bearing frame

Pump priming




WARNING:

Make sure to review MSDS regarding hazards for the pump process fluid. Personal Protective Equipment (PPE) should be worn during all activities around pump.

Prime the pump with the suction supply above the pump

- 1. Slowly open the suction isolation valve.
- 2. Open the piping vents on the suction and discharge piping until all gas is evacuated.
- 3. Close the piping vents.

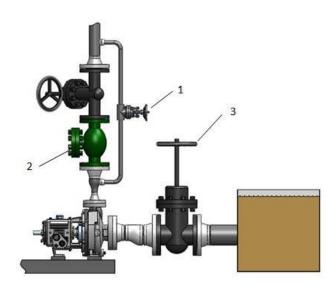


- 1. Discharge isolation valve
- 2. Check valve
- 3. Suction isolation valve

Figure 13: Pump Priming – supply above pump

Prime the pump with the suction supply below the pump


Use a foot valve and an outside source of liquid in order to prime the pump. The liquid can come from one of these sources:

- A priming pump
- A pressurized discharge line
- Another outside supply
- 1. Close the discharge isolation valve.
- 2. Open the vent valves in the casing.
- 3. Open the valve in the outside supply line until only liquid escapes from the vent valves.
- 4. Close the vent valves.
- 5. Close the outside supply line.

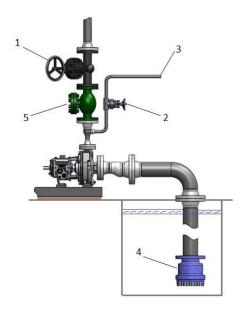

- 1. Discharge isolation valve
- 2. Priming shutoff valve
- 3. External priming fluid
- 4. Foot valve
- 5. Check valve

Figure 14: Pump Priming with foot valve and outside supply

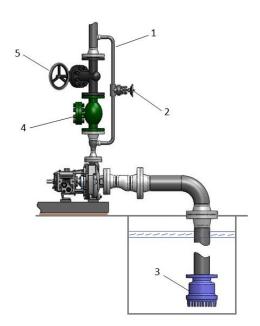

- 1. Priming by-pass line
- 2. Priming shutoff valve
- 3. Foot valve
- 4. Check valve
- 5. Discharge isolation valve

Figure 15: Pump Priming with foot valve and bypass

Start the pump



WARNING:

Immediately observe the pressure gauges. If discharge pressure is not quickly attained, stop the driver immediately, reprime, and attempt to restart the pump.



CAUTION:

- Observe the pump vibration levels, bearing temperature, and excessive noise. If normal levels are exceeded, shut down the pump and resolve the issue.
- On pure or purge-oil mist-lubricated units, remove the power end vent plug to verify that oil mist flowing properly. Replace the plug.
- Ensure that the oil level is correct prior to starting pump.

Before you start the pump, you must perform these tasks:

- Open the suction valve.
- Open any recirculation or cooling lines.
- 1. Partially open the discharge valve, depending on system conditions.
- 2. Start the driver.
- 3. Slowly open the discharge valve until the pump reaches the desired flow.
- 4. Immediately check the pressure gauge to ensure that the pump quickly reaches the correct discharge pressure.
- 5. If the pump fails to reach the correct pressure, perform these steps:
 - a) Stop the driver.
 - b) Prime the pump again.
 - c) Restart the driver.
- 6. Monitor the pump while it is operating:
 - a) Check the pump for bearing temperature, excessive vibration, and noise.
 - If the pump exceeds normal levels, then shut down the pump immediately and correct the problem.
- 7. Repeat steps 5 and 6 until the pump runs properly.

Pump operation precautions

General considerations



CAUTION:

- Vary the capacity with the regulating valve in the discharge line. Never throttle the flow from the suction side since this can result in decreased performance, unexpected heat generation, and equipment damage.
- Do not operate pump past the maximum flow. For maximum flow refer to the pump performance curve.
- Do not overload the driver. Driver overload can result in unexpected heat generation and equipment damage. The driver can overload in these circumstance.
 - The specific gravity of the pumped fluid is greater than expected.
 - The pumped fluid exceeds the rated flow rate.
- Do not operate pump below minimum flow. For minimum flows refer to technical manual and pump performance curve.
- Make sure to operate the pump at or near the rated conditions. Failure to do so can result in pump damage from cavitation or recirculation.

Operation at reduced capacity



WARNING:

Never operate any pumping system with a blocked suction and discharge. Operation, even for a brief period under these conditions, can cause confined pumped fluid to overheat, which could result in a explosion. You must take all necessary measures to avoid this condition.



CAUTION:

- The pump and system must be free of foreign objects. If pump becomes plugged, shut down and unplug prior to restarting pump.
- Avoid excessive vibration levels. Excessive vibration levels can damage the bearings, stuffing box or seal chamber, and the mechanical seal, which can result in decreased performance.
- Avoid increased radial load. Failure to do so can cause stress on the shaft and bearings.
- Avoid heat build-up. Failure to do so can cause rotating parts to score or seize.
- Avoid cavitation. Failure to do so can cause damage to the internal surfaces of the pump.

Shut down the pump

- 1. Disengage driver.
- 2. Allow pump to coast down.
- 3. Close discharge valve.

Maintenance

Maintenance schedule

It is recommended that a maintenance plan and schedule is adopted, in line with these Instructions, to include the following:

Any auxiliary systems installed must be monitored, if necessary, to ensure they function correctly.

- Gland packing must be adjusted correctly to give visible leakage and concentric alignment of the gland follower to prevent excessive temperature of the packing or follower.
- Check for any leaks from gaskets and seals. The correct functioning of the shaft seal must be checked regularly.
- Check bearing lubricant level, and if the hours run show a lubricant change is required.
- Check that the duty condition is in the allowable operating range for the pump.
- Check vibration, noise level and surface temperature at the bearings to confirm satisfactory operation.
- Check dirt and dust is removed from areas around close clearances, bearing housings and motors.
- Check coupling alignment and re-align if necessary.

Our field service technicians can help with preventative maintenance records and provide condition monitoring for temperature and vibration to identify the onset of potential problems.

Routine inspection (daily/weekly)

The following checks should be made and the appropriate action taken to remedy any deviations:

- Check operating behavior. Ensure noise, vibration and bearing temperatures are normal.
- Check that there are no abnormal fluid or lubricant leaks (static and dynamic seals) and that any sealant systems (if fitted) are full and operating normally.
- Check the level and condition of oil lubricant. On grease lubricated pumps, check running hours since last recharge of grease or complete grease change.
- Check any auxiliary systems are functioning correctly.
- Refer to the manuals of any associated equipment for routine checks needed.

Periodic inspection (six month)

- Check foundation bolts for security of attachment and corrosion.
- Check pump running records for total operating hours since last service to determine if bearing lubricant requires changing.
- Check the coupling for correct alignment and worn driving elements.
- Refer to the manuals of any associated equipment for periodic checks needed.

Bearing maintenance

These bearing lubrication sections list different temperatures of the pumped fluid.

Table 1: Oil Change Schedule

Type of bearing	First lubrication	Lubrication intervals
Oil-lubricated bearings	pump. Change the oil after	After the first 400 hours, change the oil every 2000 operating hours or every three months.
Grease-lubricated bearings	lubricated at the factory.	Re-grease bearings every 2000 operating hours or every three months.

Lubricating-oil requirements

Lubricating Oil Fill Capacities

Table 2: Required amount of oil for oil-lubricated bearings.

Frame	Qts.	Oz.	ml
Group 1	0.5	14.5	429
Group 2	1.0	30	887
Group 3	0.75	24	710

Lubricating-oil requirements

Table 3: Oil requirements based on temperature

Temperature	Oil requirement
Pumped fluid temperatures below 350° F	Use ISO VG 68
Pumped fluid temperatures exceed 350° F	Use synthetic lubrication ISO VG 100. Use water cooling coil

Acceptable oil for lubricating bearings

Acceptable lubricants

Table 4:

Examples of acceptable high quality turbine oils with rust and oxidation inhibitors

Brand	Lubricant type	
Chevron	GTS Oil 68	
Exxon	Teresstic EP 68	
Mobil	DTE 26 300 SSU @ 100°F (38°C)	
Philips	Mangus Oil 315	
Shell	Tellus Oil 68	
Sunoco	Sunvis 968	
Royal Purple	SYNFILM ISO VG 68 Synthetic Lube	

Shaft seal maintenance

Mechanical-seal maintenance



CAUTION:

Never operate the pump without liquid supplied to mechanical seal. Lack of seal flush can cause seal damage and catastrophic failure.

Cartridge mechanical seals

Cartridge mechanical seals are commonly used. Cartridge seals are preset by the seal manufacturer and require no field settings. Cartridge seals installed by the user require removal of the holding clips and engagement of the set screws prior to operation. If the seal has been installed in the pump by PW-IND, these clips have already been removed.

Other mechanical seal types

For other types of mechanical seals, refer to the instructions provided by the seal manufacturer for installation and setting.

Before you start the pump

Check the seal and all flush piping.

Disassembly

Disassembly precautions



WARNING:

- This manual clearly identifies accepted methods for disassembling units. These methods
 must be followed to ensure safe maintenance of the pump. Trapped liquid can rapidly
 expand and result in a violent explosion and injury. Never apply heat to impellers or other
 pump components to aid in their removal unless explicitly stated in this manual.
- Always disconnect and lock out power to all potential energy sources (electric, hydraulic, pneumatic, etc.) before you perform any installation or maintenance tasks. Failure to do so will result in serious physical injury.
- Refer to driver/coupling/gear manufacturers installation and operation manuals (IOM) for specific instructions and recommendations.
- The pump can handle hazardous and toxic fluids. Identify the contents of the pump and
 observe proper decontamination procedures in order to eliminate the possible exposure to
 any hazardous or toxic fluids. Wear the proper personal protective equipment. Potential
 hazards include, but are not limited to, high temperature, flammable, acidic, caustic,
 explosive, and other risks.
- A small amount of liquid will be present in the seal chamber and casing. Take proper precautions to avoid contact with hazardous fluids.



NOTICE:

• Avoid injury. Worn pump components can have sharp edges. Wear appropriate gloves while handling these parts.

Tools required

Bearing puller

Brass drift punch

Cleaning agents and solvents

Dial indicators

Feeler gauges

Hex wrenches

Hydraulic press

Induction heater

Leveling blocks and shims

Lifting sling

Micrometer

Rubber mallet

Screwdriver

Shaft wrench

Snap-ring pliers

Torque wrench with sockets

Wrenches

Drain the pump



CAUTION:

- Allow all system and pump components to cool before you handle them to prevent
 physical injury.
- Close the isolation valves on the suction and discharge sides of the pump.
 You must drain the system if no valves are installed. Always disconnect and lock out all potential energy sources (electrical, hydraulic, pneumatic, etc) before you perform any installation or maintenance tasks.
- 2. Drain the pump.
 - Do not proceed until liquid stops coming out of the drain valve.
- 3. Leave the drain valve open and remove the drain plug located on the bottom of the pump housing (if supplied).
 - Do not reinstall the plug or close the drain valve until the reassembly is complete.
- 4. Drain the liquid from the piping and flush the pump if it is necessary.
- 5. Disconnect all auxiliary piping and tubing.
- 6. Remove the coupling guard.

Remove the coupling

- 1. Disconnect the coupling.
- 2. Remove the coupling guard and motor end plate.
- 3. Remove the coupling-guard pump end-plate.

Remove the back pull-out assembly

- 1. Is your bearing frame oil lubricated?
 - If No: Proceed to step 2
 - If Yes:
 - 1. Remove the bearing-frame drain plug (408A) in order to drain oil from the bearing frame.
 - 2. Replace the plug after the oil is drained.
 - 3. Remove the constant level oiler, if equipped.

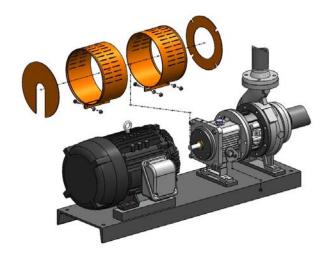


Figure 1: Guard removal



NOTICE:

Pump oil can be used as part of a predictive / preventive maintenance program. Save oil in a clean container for further review.

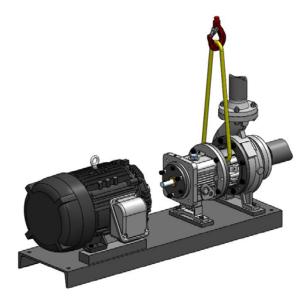


Figure 2: Back pull-out removal

- 2. Remove the hold-down bolts of the bearing frame foot.
- 3. Remove the casing bolts.



WARNING:

- Never use heat to disassemble the pump due to the risk of an explosion from trapped liquid.
- 4. Tighten the casing jack bolts evenly, using an alternating pattern, in order to remove the back pull-out assembly.
 - Use penetrating oil if the adapter to the casing joint is corroded.
- 5. Remove the back pull-out assembly from the casing (100).
- 6. Mark and remove the shims from under the frame foot and save them for reassembly. Reusing the shims assumes that the same motor frame and frame foot are being installed, and that there has been no change in piping and/or foundation.
- 7. Remove and discard the casing gasket. Do not ever re-use the casing gasket.
- 8. Remove the jackscrews.
- 9. Clean all gasket surfaces.

Remove the coupling hub

- 1. Clamp the frame adapter securely to the workbench.
- Remove the coupling hub.
 Mark the shaft for relocation of the coupling hub during reassembly.
 Reusing the coupling hub assumes that the same motor frame, RPM, and horsepower are being installed, and that there has been no change in pump operating conditions.

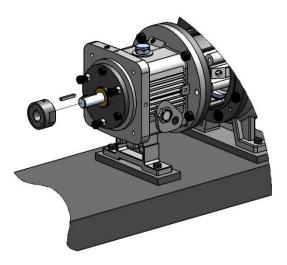


Figure 3: Coupling hub removal

Impeller removal

Remove the impeller (Group 1, 2, and 3)



WARNING:

Never apply heat to remove an impeller. The use of heat may cause an explosion due to trapped liquid, resulting in severe physical injury and property damage.

- 1. Slide the shaft wrench over the shaft (122) and key.
- 2. Rotate the impeller (101) clockwise (viewed from the impeller end of the shaft) and raise the wrench off of the work surface.
- 3. To loosen the impeller, quickly turn it counter-clockwise (viewed from the impeller end of the shaft) while impacting the wrench handle on the workbench or a solid block.



Figure 4: Impeller removal

- 4. Repeat step 3 until the impeller is loose.
- 5. Remove and discard the impeller O-ring (412A).



Figure 5: O-ring for models PWA, PWA-LF, PWA-SP

Remove the stuffing box cover (seal chamber) (PWA, PWA-LF, PWA-SP)

- 1. Remove the gland stud nuts (355).
- 2. Remove the casing cover stud nuts (370H).
- 3. Remove the casing cover (184).

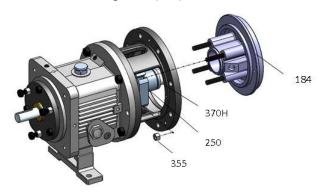


Figure 6: Seal chamber removal

4. Remove the shaft sleeve (126) if it is used. The mechanical seal is attached to the sleeve.



NOTICE:

Be careful with the stationary portion of the mechanical seal that is either clamped between the backplate and the gland or seated in the stuffing box / seal chamber bore. Failure to do so may result in equipment damage.

5. Remove the rotary portion of the seal from the sleeve by loosening the

- set screws and sliding it off the sleeve. Refer to the mechanical-seal instructions for more information.
- 6. Remove the gland (250), the stationary portion of the seal, and the O-ring (360Q).

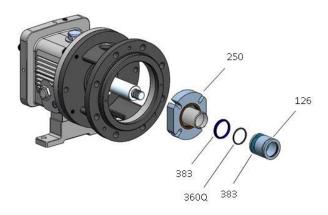


Figure 7: Mechanical seal removal

Remove the frame adapter (Group 2,3)

- 1. Remove the frame adapter (108).
- Remove and discard the gasket (360D).You will install a new gasket during reassembly.
- 3. Remove the dowel pins (496B) and the bolts (370B).

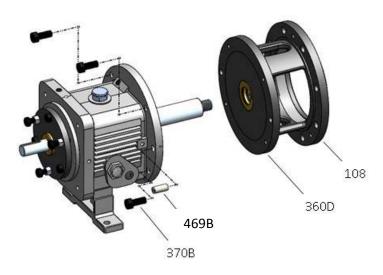


Figure 8: Adapter removal

Remove the inboard labyrinth oil seal

Labyrinth oil-seal O-rings are part of the PWA-LF maintenance kits, and they are sold separately.

1. Determine the fit of your labyrinth oil seal.

Table 5: Labyrinth oil-seal fit

Model	Type of fit	
Group 1	O-ring fit into the bearing-frame adapter	
Group 1, 2, 3	O-ring fit into the frame adapter	

2. Remove the O-rings (497H and 497J) and the seal (333A).

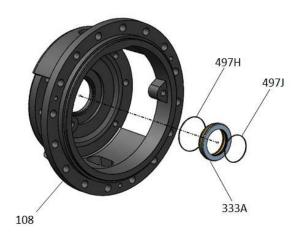


Figure 9: Labyrinth seal removal

Power-end disassembly

General Considerations

- To limit the potential for shaft damage, remove ball bearings by applying force to the INNER race.
- Regardless of removal technique, ball bearings are NOT re-usable after they are removed. Always use new bearings.
- If bearings are suspected as a cause of failure, retain them for further inspection. Detailed bearing inspection can be a valuable tool in failure analysis.
- Avoid removal of Oil Flinger (248) unless it is damaged.

Disassemble the power end (Group 1 & 2)

- 1. Remove the clamp screws (370C) and back off the jam nuts (423).
- 2. Tighten the jack screws (370D) evenly to move the bearing housing (134) out of the bearing frame (228).
- 3. Remove the shaft assembly from the bearing frame (228).

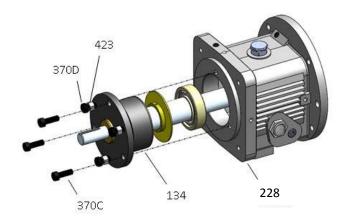


Figure 10: Shaft assembly removal

- 4. Remove the jack screws (370D) with nuts (423).
- 5. Remove the bearing housing O-ring (496) and the bearings.
- 6. Remove the outboard bearing retaining snap ring (361A).

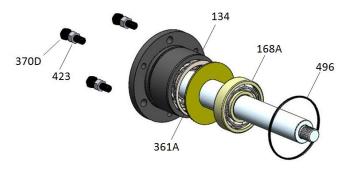


Figure 11: Hardware removal

7. Remove the bearing housing (134) and the shaft (122).

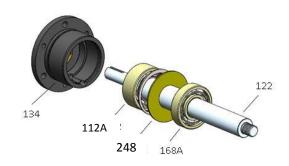


Figure 12: Bearing housing removal

8. Remove the bearing locknut (136) and bearing lock washer (382).

- 9. Remove the inboard bearing (168A).
- 10. Remove the outboard bearing (112A).

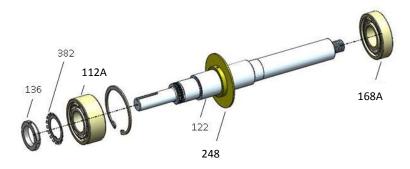


Figure 13: Bearing removal

Disassemble the power end (Group 1 and 2 with duplex bearings)

- 1. Remove the clamp screws (370C) and back off the jam nuts (423).
- 2. Tighten the jack screws (370D) evenly to move the bearing housing (134) out of the bearing frame (228).
- 3. Remove the shaft assembly from the bearing frame (228).
- 4. Remove the jack screws (370D) with the nuts (423).
- 5. Remove the bearing housing O-ring (496).

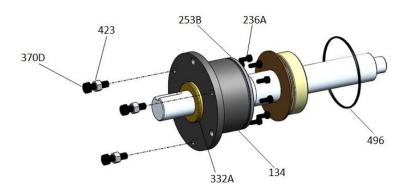


Figure 14: Hardware removal - Group 1&2 duplex bearing

- 6. Remove the clamp ring screws (236A) and separate the clamp ring (253B) from the bearing housing (134).
 - You must remove the bearings before you can remove the clamp ring from the shaft.
- 7. Remove the bearing housing (134).
- 8. Remove the inboard bearing (168A).

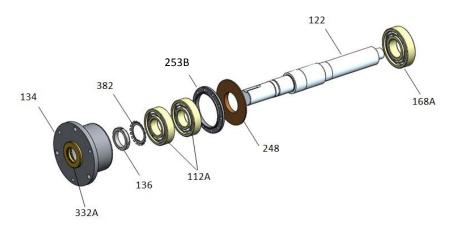


Figure 15: Bearing removal – Group 1 & 2 duplex bearing

- 9. Remove the bearing locknut (136) and bearing lock washer (382).
- 10. Remove the outboard bearings (112A) and clamping ring (253B).
- 11. Remove the outboard labyrinth oil seal (332A) from the bearing housing (134). Remove the O-rings (497F and 497G) if it is necessary. Labyrinth oil seal O-rings are part of the PWA-LF maintenance kits and they are sold separately.

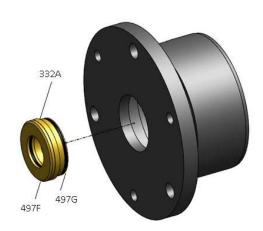


Figure 16: Labyrinth seal removal bearing housing

Disassemble the power end (Group 3)

- 1. Remove the clamp screws (370C) and back off the jam nuts (423).
- 2. Evenly tighten the jack screws (370D) to move the bearing housing (134) out of the bearing frame (228).
- 3. Remove the shaft assembly from the bearing frame (228).

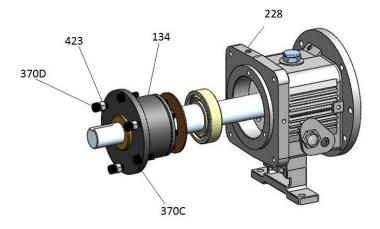


Figure 17: Shaft assembly removal

- 4. Remove the jack screws (370D) with the nuts (423).
- Remove the clamp-ring screws (236A) and separate the clamp ring (253B) from the bearing housing (134).
 You must remove the bearings before you can remove the clamp ring from the shaft.
- 6. Remove the bearing housing O-ring (496) and the inboard bearing (168A).

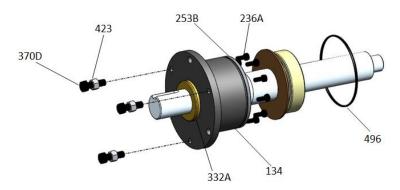


Figure 18: Hardware removal – Group 3

7. Remove the bearing housing (134).

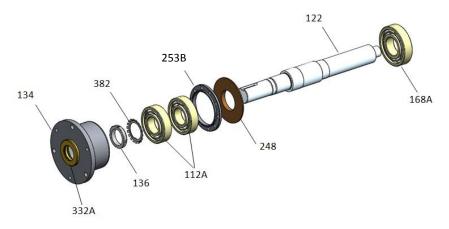


Figure 19: Bearing removal – Group 3

- 8. Remove the inboard bearing (168A)
- 9. Remove the bearing lock nut (136) and the bearing lock washer (382).
- 10. Remove the outboard bearings (112A) and the clamp ring (253B).
- 11. Remove the outboard labyrinth oil seal (332A) from the bearing housing (134).
- 12. Remove the O-rings (497F and 497G) if it is necessary.
 Labyrinth oil-seal O-rings are part of the PWA-LF maintenance kits, and they are sold separately.

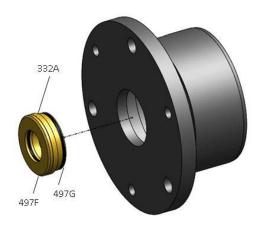


Figure 20: Labyrinth seal removal – Group 3

Pre-assembly inspections

Guidelines

Before you assemble the pump parts, make sure you follow these guidelines:

- Inspect the pump parts according to the information in these pre-assembly topics before you reassemble your pump. Replace any part that does not meet the required criteria.
- Make sure that the parts are clean. Clean the pump parts in solvent in order to remove oil, grease, and dirt.



NOTICE:

Protect machined surfaces while you clean the parts. Failure to do so may result in equipment damage.

Replacement guidelines

Casing check and replacement



WARNING.

Avoid death or serious injury. Leaking fluid can cause fire and/or burns. Inspect and assure gasket sealing surfaces are not damaged and repair or replace as necessary.

Inspect the casing for cracks and excessive wear or pitting. Thoroughly clean gasket surfaces and alignment fits in order to remove rust and debris.

Repair or replace the casing if you notice any of these conditions:

- Localized wear or grooving that is greater than 1/8 in. (3.2 mm) deep
- Pitting that is greater than 1/8 in. (3.2 mm) deep

Casing areas to inspect

The arrows point to the areas to inspect for wear on the casing:

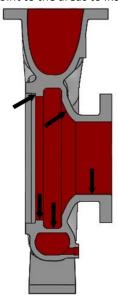


Figure 21: Case inspection PWA-LF

Impeller replacement

Table 6: Replacing the impeller

Inspection Area	When to replace
Impeller vanes	 When grooved deeper than 1/16 in. (1.6 mm), or When worn evenly more than 1/32 in. (0.8 mm)
Pumpout vanes (back of impeller)	When worn more than 1/32 in. (0.8 mm)
Vane edges	Cracks, pitting, or corrosion damage

Impeller areas to inspect

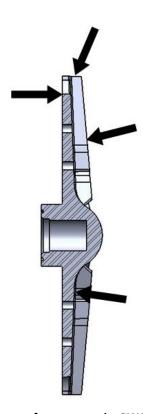


Figure 22: Areas to inspect for wear on the PWA-LF impeller.

Labyrinth seal replacement

Replace the labyrinth seal O-ring if it has cuts and cracks. Replace the entire labyrinth-seal assembly if it is damaged or bent. Rotate the seal several times by hand before installation. If it does not spin smoothly, it should be replaced.

Gaskets and O-ring replacement

WARNING:

Avoid death or serious injury. Leaking fluid can cause fire and/or burns. Replace any damaged or worn gaskets/o-rings.

Replace all gaskets and O-rings at each overhaul and disassembly.

Shaft and sleeve replacement guidelines

Shaft measurements check

Replace the shaft (122) if any measurements exceed acceptable values. See Bearing fits and tolerances.

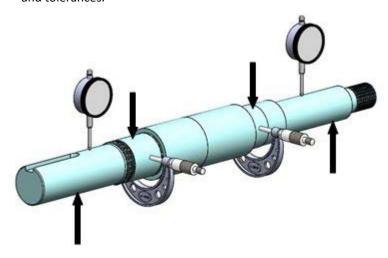


Figure 23: Shaft run out inspection

Straightness check

Replace the shaft (122) if runout exceeds the values in this table:

Table 7: Shaft run out tolerances for sleeve fit and coupling fit

	Sleeve fit in inches (millimeters)	Coupling fit in inches (millimeters)
With sleeve	0.001 (0.025)	0.001 (0.025)
Without sleeve	0.002 (0.051)	0.001 (0.025)

Shaft and sleeve check

- Check the shaft and sleeve (126) surface for grooves and pitting.
- Replace the shaft and sleeve if any grooves or pits are found.

Bearing-frame inspection

Checklist

Check the bearing frame for these conditions:

- Visually inspect the bearing frame and frame foot for cracks.
- Check the inside surfaces of the frame for rust, scale, or debris. Remove all loose and foreign material.
- Make sure that all lubrication passages are clear.
 If the frame has been exposed to pumped fluid, inspect the frame for corrosion or pitting.
- Inspect the inboard-bearing bores.
 If any bores are outside the measurements in the Bearing fits and tolerances table, replace the bearing frame.

Surface inspection locations

This figure shows the areas to inspect for wear on the bearing frame outside surface.

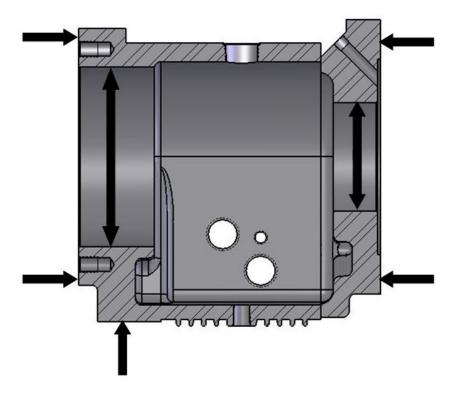


Figure 24: Outside & Inside surface inspection locations – bearing frame

Seal chamber and casing cover inspection

Checklist

Perform these checks when you inspect the seal chamber and stuffing box cover:

- Make sure that these surfaces are clean:
 - 1) Seal chamber and stuffing box cover
 - 2) Mounting
- Replace the seal chamber and stuffing box cover if pitting or wear exceeds 1/8"
 (3.2 mm) deep.
- Inspect the machined surfaces and mating faces noted in the figures. These images point to the areas to inspect:

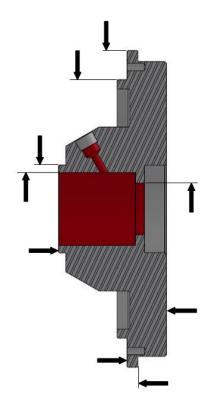


Figure 25: Casing cover inspection areas - Standard Bore

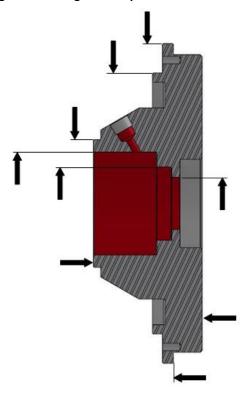


Figure 26: Casing cover inspection areas - Big Bore

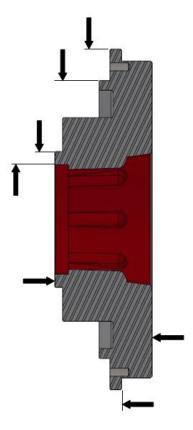


Figure 27: Casing cover inspection areas - Taper Bore

Bearing-housing inspection

Checklist

- Inspect the bearing-housing (134) bore according to the bearing fits and tolerances table.
- Replace the bearing housing if the dimensions exceed acceptable values.
 Reference: see Bearings fits and tolerances.
- Visually inspect the bearing housing for cracks and pits.

Checklist for specific models

Table 8: Bearing housing checks

· unit or zouring mounts		
Frame	Bearing-housing check	
Group 1, 2, 3	Clean grooves, drain port and face	

Inspection locations

The following images point to the areas to inspect on the bearing housing.

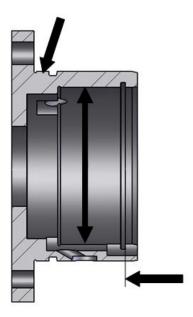


Figure 28: Inspection areas - Group 1 and 2 bearing housing

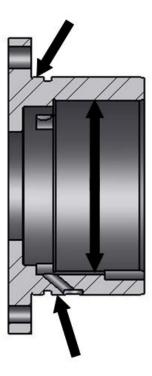


Figure 29: Inspection areas - Group 3 bearing housing

Bearing fits and tolerances

Table 9: Bearing fits and tolerances table

This table references the bearing fits and tolerances for the PWA, PWA-LF and PWA-SP

	Group 1 inches (millimeters)	Group 2 inches (millimeters)	Group 3 inches (millimeters)
Shaft OD	1.3785 (35.014)	1.7722 (45.014)	2.1660 (55.016)
NDE	1.3781 (35.004)	1.7718 (45.004)	2.1655 (55.004)
Bearing ID	1.3780 (35.001)	1.7717 (45.001)	2.1654 (55.001)
NDE	1.3775 (34.989)	1.7712 (44.988)	2.1648 (54.986)
FIT	0.0010 (0.025) tight	0.0010 (0.025) tight	0.0012 (0.030) tight
	0.0001 (0.003) tight	0.0001 (0.003) tight	0.0001 (0.003) tight
Frame ID	2.8358 (72.029)	3.9384 (100.035)	4.7258 (120.035)
NDE	2.8351 (72.011)	3.9375 (100.013)	4.7249 (120.012)
Bearing OD	2.8346 (72.000)	3.9370 (100.000)	4.7244 (120.000)
NDE	2.8341 (71.986)	3.9364 (99.985)	4.7238 (119.985)
FIT	0.0017 (0.043)	0.0020 (0.051)	0.0020 (0.051)
	loose	loose	loose
	0.0005 (0.013)	0.0005 (0.013)	0.0005 (0.013)
	loose	loose	loose
Shaft OD	1.1815 (30.010)	1.7722 (45.014)	1.9690 (50.013)
DE	1.1812 (30.002)	1.7718 (45.004)	1.9686 (50.003)
Bearing ID	1.1811 (30.000)	1.7717 (45.001)	1.9685 (50.000)
DE	1.1807 (29.990)	1.7712 (44.988)	1.9680 (49.987)
FIT	0.0008 (0.020) tight	0.0010 (0.025) tight	0.0010 (0.025) tight
	0.0001 (0.003) tight	0.0001 (0.003) tight	0.0001 (0.003) tight
Housing ID	2.8358 (72.029)	3.9384 (100.035)	4.3321 (110.035)
DE	2.8351 (72.011)	3.9375 (100.013)	4.3312 (110.012)
Bearing OD	2.8346 (72.000)	3.9370 (100.000)	4.3307 (110.000)
DE	2.8341 (71.986)	3.9364 (99.985)	4.3301 (109.985)
FIT	0.0017 (0.043)	0.0020 (0.051)	0.0020 (0.051)
	loose	loose	loose
	0.0005 (0.013)	0.0005 (0.013)	0.0005 (0.013)
	loose	loose	loose

Reassembly

General Considerations



CAUTION:

Wear insulated gloves when you use a bearing heater. Bearings get hot and can cause physical injury.



NOTICE:

Make sure that the pipe threads are clean, and that you apply thread sealant to the plugs and fittings. Failure to do so may result in equipment damage.



NOTICE:

Only use a degaussing induction heater or precision oven to warm bearings for assembly. Improper bearing heating can significantly affect bearing life and pump performance.

- 1. Prepare the bearing frame (228) as follows (see the illustration):
 - a) Install the oil-fill plug (113B).
 - b) Install the oil-drain plug (408A).
 - c) Install the sight glass (319).
 - d) Install the sight oiler plug (408J).
 - e) Install the plug for the oil-cooler inlet (408L).
 - f) Install the plug for the oil-cooler outlet (408M).
 - g) Install two oil-mist connection plugs (408H).
 - Or: Install two grease fittings (193) and two grease-relief plugs (113)
 - h) Attach the bearing-frame foot (241) and fasten the bolts (370F) by hand.

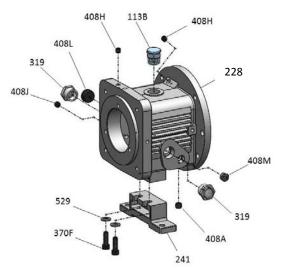


Figure 30: Assemble the bearing frame and foot

- 2. Install the outboard bearing (112A) on the shaft (122).
 - The regreaseable bearing has a single shield. The outboard bearing is installed with the shield toward the impeller.
 - a) Inspect the shaft (122) to ensure that it is clean, dimensionally correct, and is free of nicks and burrs.
 - b) Lightly coat the bearing seating with a thin film of oil.
 - c) Remove the bearing (112A) from its packaging.
 - d) Wipe the preservative from the bearing (112A) bore and outer diameter
 - e) Use an induction heater with a demagnetizing cycle to heat the bearing (112A) to an inner ring temperature of 230 $^{\circ}$ F (110 $^{\circ}$ C).
 - f) Position the bearing (112A) on the shaft (122) against the shoulder and snug the locknut (136) against the bearing until it is cool.
 - The locknut prevents the bearing from moving away from the shaft shoulder as it cools.
 - g) Remove the bearing locknut (136) after the bearing (112A) cools to room temperature.
- 3. Put the lock washer (382) onto the shaft (122).
- 4. Thread the locknut (136) onto the shaft (122) and tighten it until it is tight.
- 5. Bend the tangs of the lock washer into the slots of the locknut.

- 6. Make sure that the flat side of the snap ring is towards the bearing.
- 7. Coat the inner surfaces of the bearings with lubricant.
- 8. Install flinger disk (248) onto shaft.
- Put the inboard bearing (168) onto the shaft (122).
 The regreaseable bearing has a single shield. Make sure that the bearing is installed with the shield away from the impeller.

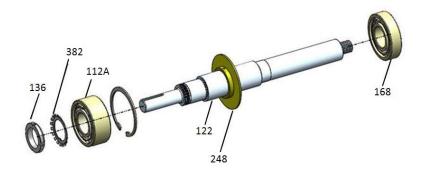


Figure 31: Shaft Assembly

- 10. Prepare the shaft for assembly as follows:
 - a) Install a new O-ring (496).
 - b) Coat the outside of the outboard bearing (112A) with oil.
 - c) Coat the bore of the bearing housing (134) with oil.
 - d) Put the bearing housing (134) onto the shaft. Do not use force.
 - e) Insert the bearing-retaining ring (361A) into the bore groove of the bearing housing (134).

NOTICE

NOTICE:

Ensure that the space between the ends of the retaining ring are located such that the oil return groove is not obstructed. **Return groove obstruction can cause reduced bearing life.**

Make sure that the shaft rotates freely.

f) Install the outboard labyrinth oil-seal (332A) into the bearing housing (134). Place the drain slots of the oil seal at the bottom position (6 o'clock). Make sure that the edges of the keyway are free from burrs. To protect the Oring, cover the keyway lengthwise with a piece of electrical tape before you install the oil seal.

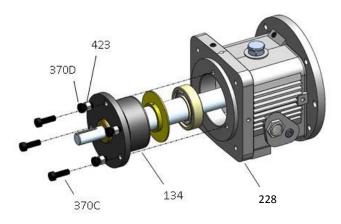


Figure 32: Shaft assembly installation

- 11. Install the shaft assembly into the bearing frame as follows (see the illustration):
 - a) Coat the outside of the bearing housing (134) with light oil.
 - b) Coat all the internal surfaces of the bearing frame (228) with light oil.
 - c) Install the shaft assembly into the bearing frame (228). Make sure that the shaft rotates freely.
 - d) Install the clamp bolts (370C) in the bearing housing (134) and tighten by hand.
 - e) Install the jack bolts (370D) with the locknuts (423) in the bearing housing (134) and tighten by hand.

Assemble the rotating element and the bearing frame (Group 1 and 2 with duplex bearings)

- 1. Prepare the bearing frame (228) as follows (see the illustration):
 - a) Install the oil-fill plug (113B).
 - b) Install the oil-drain plug (408A).
 - c) Install the sight glass (319).
 - d) Install the plug-oiler (408J).
 - e) Install the plug for the oil-cooler inlet (408L).
 - f) Install the plug for the oil-cooler outlet (408M).
 - g) Install two oil-mist connection plugs (408H). Or: Install two grease fittings (193) and two grease-relief plugs (113).
 - h) Attach the bearing-frame foot (241) and fasten the bolts (370F) by hand.

Figure 33: Assemble the bearing frame and foot – duplex bearing

2. Install flinger disk (248), clamping ring (253B) making sure the orientation is correct, and the outboard bearings (112A) on to the shaft (122).

The re-greasable bearing has a single shield. Make sure that the bearing is installed with the shield away from the impeller.

The duplex bearings are mounted back-to-back. Make sure that the orientation of the bearings is correct.

a) Inspect the shaft (122) to ensure that it is clean, dimensionally correct, and is free of nicks and burrs.

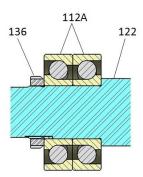


Figure 34: Duplex bearing installation

- b) Lightly coat the bearing seating with a thin film of oil.
 - c) Remove the bearings (112A) from their packaging.
 - d) Wipe the preservative from the bearing (112A) bore and outer diameter.
 - e) Use an induction heater with a demagnetizing cycle to heat both bearings (112) to an inner ring temperature of 230 °F (110 °C).
 - f) Place both bearings (112A) on the shaft (122) with the large outer races together (back- to-back).
 - g) Position the bearings (112A) on the shaft (122) against the shoulder and snug the locknut (136) against the bearings until they are cool.
 The locknut prevents the bearings from moving away from the shaft shoulder
- as they cool. Rotate the outer bearing rings relative to each other as they are placed on the shaft to assure good alignment.
 - h) Remove the bearing locknut (136) after the bearings (112A) are cool.

- 3. Put the lock washer (382) onto the shaft (122).
- 4. Thread the locknut (136) onto the shaft (122) and tighten it until it is tight.
- 5. Bend the tangs of the lock washer into the slots of the locknut.
- 6. Coat the inner surfaces of the bearings with lubricant.

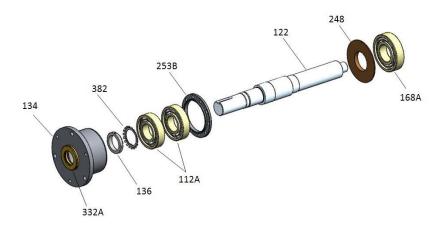


Figure 35: Shaft assembly - duplex bearings

- 7. Put the inboard bearing (168A) onto the shaft (122).
- 8. Install the bearing housing as follows (see the illustration):
 - a) Coat the outside of the outboard bearing (112A) with oil.
 - b) Coat the bore of the bearing housing (134) with oil.
 - c) Put the bearing housing (134) onto the shaft. Do not use force.

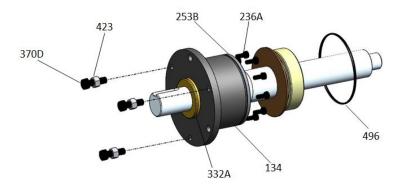


Figure 36: Housing assembly - duplex bearing

- 9. Prepare the shaft for assembly as follows (see the illustration):
 - Fasten the clamp-ring bolts (236A) crosswise.
 See the specified torque values.
 Make sure that the shaft rotates freely.
 - b) Install a new O-ring (496).
 - d) Install the outboard labyrinth oil-seal (332A) into the bearing housing (134).

Place the drain slots of the oil seal at the bottom position (6 o'clock). Make sure that the edges of the keyway are free from burrs. To protect the Oring, cover the keyway lengthwise with a piece of electrical tape before you install the oil seal.

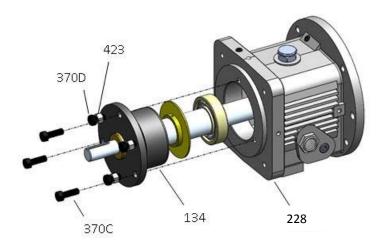


Figure 37: Shaft assembly installation - duplex bearing

- 10. Install the shaft assembly into the bearing frame as follows (see the illustration):
 - a) Coat the outside of the bearing housing (134) with oil.
 - b) Coat all the internal surfaces of the bearing frame (228) with oil.
 - c) Install the shaft assembly into the bearing frame (228). Make sure that the shaft rotates freely.
 - d) Install the clamp bolts (370C) in the bearing housing (134) and tighten by hand.
 - e) Install the jack bolts (370D) with the locknuts (423) in the bearing housing (134) and tighten by hand.

Assemble the rotating element and the bearing frame (Group 3)

- 1. Prepare the bearing frame (228) as follows (see the illustration):
 - a) Install the oil-fill plug (113B).
 - b) Install the oil-drain plug (408A).
 - c) Install the sight glass (319).
 - d) Install the plug-oiler (408J).
 - e) Install the plug for the oil-cooler inlet (408L).
 - f) Install the plug for the oil-cooler outlet (408M).
 - g) Install two oil-mist connection plugs (408H).

 Or: Install two grease fittings (193) and two grease-relief plugs (113).
 - h) Attach the bearing-frame foot (241) and fasten the bolts (370F) by hand.

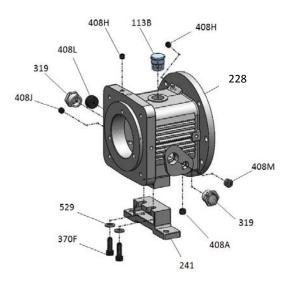


Figure 38: Assemble the bearing frame and foot - Group 3

2. Install the oil flinger (248) onto the shaft (122).

NOTICE

NOTICE:

The oil flinger is press fitted onto the shaft. Use a properly sized driver. Failure to do so may result in damage to the oil flinger.

- 3. Place the bearing-clamp ring (253B) onto the shaft (122). Make sure that the orientation of the bearing-clamp ring is correct.
- 4. Install outboard bearings (112A) on shaft (122).

The regreaseable bearing has a single shield. Make sure that the bearing is installed with the shield away from the impeller.

The duplex bearings are mounted back-to-back. Make sure that the orientation of the bearings are correct.

a) Inspect the shaft (122) to ensure that it is clean, dimensionally correct, and is free of nicks and burrs.

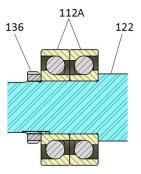


Figure 39: Duplex bearing assembly - Group 3

- b) Lightly coat the bearing seating with a thin film of oil.
- c) Remove the bearings (112A) from their packaging.
 - d) Wipe the preservative from the bearing (112A) bore and outer diameter.
 - e) Use an induction heater with a demagnetizing cycle to heat both bearings (112) to an inner ring temperature of 230 °F (110 °C).
- f) Place both bearings (112A) on the shaft (122) with the large outer races together (back- to-back).

- g) Position the bearings (112A) on the shaft (122) against the shoulder and snug the locknut (136) against the bearings until they are cool.
 - The locknut prevents the bearings from moving away from the shaft shoulder as they cool.
 - Rotate the outer bearing rings relative to each other as they are placed on the shaft to assure good alignment.
- h) Remove the bearing locknut (136) after the bearings (112A) are cool.
- 5. Put the lock washer (382) onto the shaft (122).
- 6. Thread the locknut (136) onto the shaft (122) and tighten it until it is tight.
- 7. Bend the tangs of the lock washer into the slots of the locknut.
- 8. Coat the inner surfaces of the bearings with lubricant.
- 9. Install the fling disk (248) onto the shaft
- 10. Put the inboard bearing (168A) onto the shaft (122).

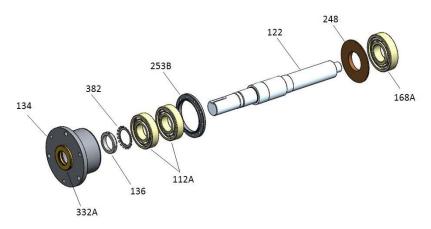


Figure 40: Shaft Assembly - duplex bearing group 3

- 11. Install the bearing housing as follows (see the illustration):
 - a) Coat the outside of the outboard bearing (112A) with oil.
 - b) Coat the bore of the bearing housing (134) with oil.
 - c) Put the bearing housing (134) onto the shaft. Do not use force.

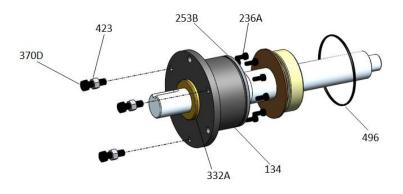


Figure 41: Housing assembly - Group 3

- 12. Prepare the shaft for assembly as follows (see the illustration):
 - Fasten the clamp-ring bolts (236A) crosswise.
 See the specified torque values.
 Make sure that the shaft rotates freely.
 - b) Install a new O-ring (496).
 - c) Install the outboard labyrinth oil-seal (332A) into the bearing housing (134). Place the drain slots of the oil seal at the bottom position (6 o'clock). Make sure that the edges of the keyway are free from burrs.

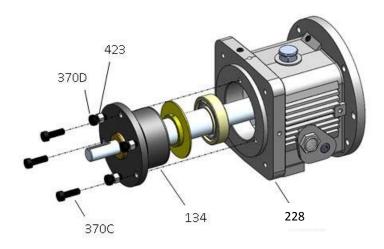


Figure 42: Shaft assembly installation - Group 3

- 13. Install the shaft assembly into the bearing frame as follows (see the illustration):
 - a) Coat the outside of the bearing housing (134) with oil.
 - b) Coat all the internal surfaces of the bearing frame (228) with oil.
 - c) Install the shaft assembly into the bearing frame (228). Make sure that the shaft rotates freely.
 - d) Install the clamp bolts (370C) in the bearing housing (134) and tighten by hand.
 - e) Install the jack bolts (370D) with the locknuts (423) in the bearing housing (134) and tighten by hand.

Assemble the frame

- 1. Support the frame assembly in a horizontal position.
- 2. Check the shaft-end play by moving the shaft forward and backward by hand, and note any indicator movement.

If the total indicator reading is greater than the values in this table, then disassemble the shaft assembly and determine the cause.

Table 10: Shaft-end play

Use this table as a reference for shaft-end play values

	Double row bearing	Duplex bearing
Group 1 inches (millimators)	0.0011 (0.028)	0.0007 (0.018)
Group 1 inches (millimeters)	0.0019 (0.048)	0.0010 (0.025)
Grave 3 in the co (mailliment and)	0.0013 (0.033)	0.0009 (0.023)
Group 2 inches (millimeters)	0.0021 (0.053)	0.0012 (0.030)
Crave 3 in short (millimentant)	Niet en alien ble	0.0010 (0.025)
Group 3 inches (millimeters)	Not applicable	0.0015 (0.038)

Figure 43: Indicator Installation – shaft/shaft sleeve runout.

- 3. Check the shaft/shaft sleeve (126) runout.
 - a) Install the shaft sleeve.
 - b) Thread the impeller on the shaft until hand tight.
 - c) Rotate the shaft 360°.
 - d) If the total indicator reading is greater than 0.002 in. (0.051 mm), then disassemble the shaft sleeve and determine the cause.
 - e) Remove the impeller and shaft sleeve.

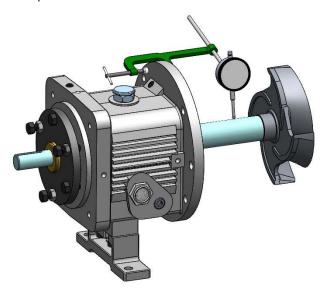


Figure 44: Indicator Installation – Shaft Sleeve Runout

4. With the shaft in the vertical position check the frame-face runout by rotating the shaft so that the indicator measures the fit for 360°. If the total indicator reading is greater than 0.002 in. (0.050 mm), then disassemble and determine the cause.

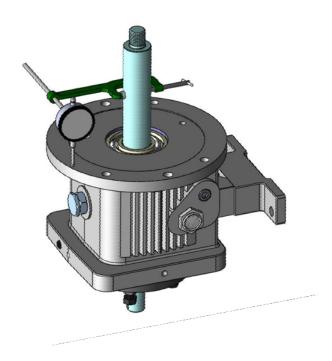


Figure 45: Indicator installation – frame face runout

- Place the plastic gasket (360D) on the frame (228), and hold the gasket in place by inserting the dowel pins (469B) in their holes.
 The gasket is designed to fit only one way.
- 6. Install the frame adapter.
 - a) Place the frame adapter (108) onto the frame assembly.
 - b) Align the bolt holes and dowel locations on the frame adapter with the bolt holes and dowel locations on the frame.

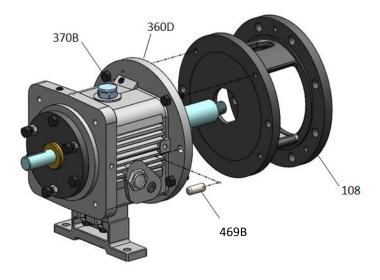


Figure 46: Frame adapter installation

d) Rotate the shaft 360º to check the adapter fit. If the total indicator reading is greater than 0.005 in. (0.13 mm), then determine the cause and correct it before you proceed.



Figure 47: Indicator installation – Frame adapter runout

- 7. Install the labyrinth oil-seal (333A) into the adapter (108) and the bearing frame (228). The labyrinth oil seal is an O-ring fit.
- 8. Position the labyrinth oil-seal drain slots at the bottom (6 o'clock) position.

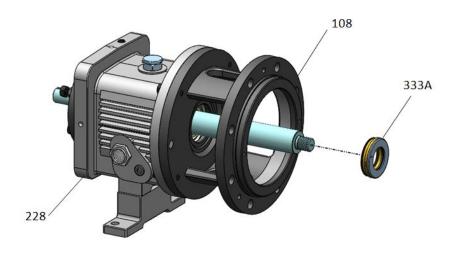


Figure 48: Labyrinth oil seal installation

INPRO labyrinth oil seal description

Description

The INPRO VBXX-D Labyrinth Oil Seal consists of the rotor (1), the stator (2), and the VBX Ring 3). The rotor (1) fits over the shaft and is held in place by an elastomeric drive ring (4). The drive ring causes the rotor to turn with the shaft and provides a positive, static seal against the shaft. Since there is no metal-to-metal contact, there are no friction or wear concerns.

NOTICE:

The INPRO VBX is a one-piece design. Do not attempt to separate the rotor from the stator before or during installation. Doing so may result in equipment damage.

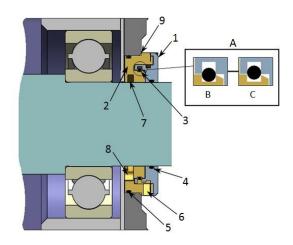


Figure 49: Labyrinth Oil Seal assembly

Table 11: Labyrinth Oil Seal Part Description

	-bararr	
A	"VBX" O-ring action	
В	Static	
С	Dynamic	
1	Rotor	
2	Stator	
3	"VBX" ring	
4	Rotor drive ring	
5	Stator gasket	
6	Expulsion port	
7	D groove	
8	Lube return	
9	Location shoulder	

Install the INPRO labyrinth oil seal

1. Wrap electrical tape around the coupling end of the shaft to cover the keyway.



NOTICE:

The edges of the keyway can be sharp. Make sure to cover the keyway with tape. Failure to do so may result in cutting the O-ring and damaging the seal.

- 2. Lightly lube the shaft and the drive ring (4) with lubricant.
 Lubricant helps in the installation process. Be sure that the lubricant is compatible with the O-ring material and the pump-system standards.
- 3. Use an arbor press to install the outboard INPRO VBXX-D into the bearing cover with the expulsion port (6) at the 6 o'clock position.
 Press the outboard INPRO VBXX-D down to where the stator location ramp (9) starts to avoid angular misalignment. There is a nominal 0.002 in. (0.051 mm) interference fit.
- 4. Discard any residual material from the stator gasket (5).
- 5. Complete the applicable step in this table depending on the model of your pump.

Table 12: Labyrinth oil-seal installation

Pump model	Action
Group 1	Press the inboard seal along the shaft into the bearing frame.
All other models	After you install the frame adapter on the bearing frame, press the inboard seal over the shaft and into the adapter.

Shaft sealing with cartridge mechanical seal

Correct

Seal the shaft with a packed stuffing box

Pumps are shipped without the packing, lantern ring, or split gland installed. These parts are included with the box of fittings shipped with each pump and must be installed before startup.

Incorrect

- 1. Carefully clean the stuffing-box bore.
- 2. Twist the packing enough to get it around the shaft.

Packing Rings Correct Incorrect Lantern Rings

3. Insert the packing and stagger the joints in each ring by 90°.

Install the stuffing-box parts in this order:

- a) Two packing rings
- b) One lantern ring (two-piece)
- c) Three packing rings

NOTICE

NOTICE:

Make sure that the lantern ring is located at the flushing connection to ensure that flush is obtained. Failure to do so may result in decreased performance.

4. Install the gland halves and evenly hand-tighten the nuts.

Seal the shaft

- 1. Slide the cartridge seal onto the shaft or sleeve until it contacts the inboard labyrinth oil seal.
- 2. Install the seal chamber.
- 3. Slide the cartridge seal into the seal chamber and secure using the four studs and nuts.
- 4. Continue with the pump reassembly.
- 5. Set the impeller clearance.
 Refer to the Impeller clearance setting topic for more information.
- 6. Tighten the setscrews in the seal locking ring in order to secure the seal to the shaft.
- 7. Remove the centering clips from the seal.

Seal the shaft with a cartridge mechanical seal

- 1. Assemble the seal chamber:
 - a) Install a seal-chamber cover or a backplate (184) and fasten with nuts (370H).

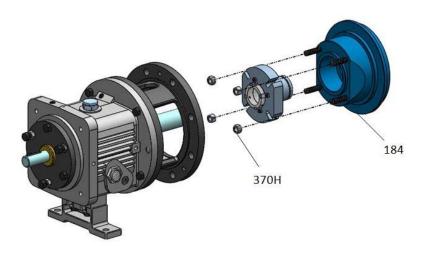


Figure 50: Mechanical Seal installation

b) Check the seal-chamber cover runout.

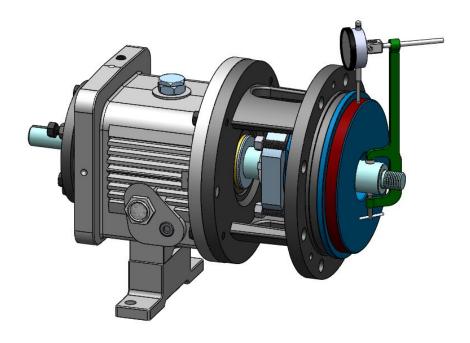


Figure 51: Seal-chamber cover runout inspection

Rotate the indicator through 360°. If the total indicator reading is greater than 0.005 inches (0.13 mm), determine the cause and correct the issue before you proceed.

Install the shaft sleeve (126).



Figure 52: Shaft Sleeve installation

- 2. Continue the complete reassembly of the pump, do not install Teflon o-ring (412A) at this point.
- 3. Set the impeller clearance.
 - Refer to the Impeller clearance setting section for more information.
- 4. Scribe a line on the marked shaft and sleeve at the face of the seal chamber.
- 5. Remove the casing, the impeller, and the seal chamber.
- 6. Install the gland, with the stationary seat and gland gaskets installed.
- 7. Install the mechanical-seal rotary unit per the manufacturer's instructions.

 Use the scribed line as the seal-reference dimension. Be sure to secure the rotary unit in place using the set screws in the locking ring.
- 8. Reinstall the seal chamber and attach gland.
- 9. Install Teflon impeller o-ring (412A).
- 10. Complete the reassembly of the pump.

Install the impeller

1. Install the impeller.

Table 13: Impeller installation

Pump size	Action	
Group 1,2,3	Install the impeller (101). Use a new impeller O-ring (412A).	

- 2. Attach a shaft wrench and a coupling key on the shaft.
 - a) When the impeller (101) makes firm contact with the shaft or sleeve (126), raise the shaft wrench (counterclockwise, viewed from the impeller end of the shaft) off of the bench and slam it down (clockwise, viewed from the impeller end of shaft).
- 3. Attach a shaft wrench and a coupling key on the shaft.
 - a) With the impeller (101) firmly mounted against the sleeve (126), rapidly rotate the shaft wrench (clockwise, viewed from the drive end of the shaft) so that the wrench forcefully hits the work bench.
 - b) Repeat "step a" until impeller (101) is tight.

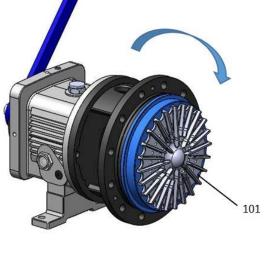


Figure 53: Impeller installation

- 4. Loosen the clamp bolts (370C) and the jack bolts (370D).
- 5. Measure the gap between the impeller (101) and the seal chamber and casing cover (184) with a feeler gauge.

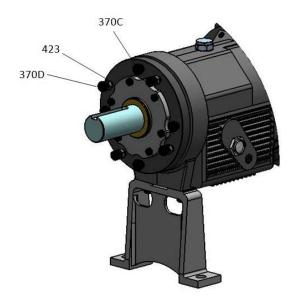


Figure 54: Setting impeller clearance

- 6. When you reach 0.030 in. (0.76 mm) clearance, tighten the clamp bolts (370C), jack bolts (370D), and lock nuts (423).
 - Perform a final impeller adjustment after you install the impeller into the casing

For more information on how to set the impeller clearances, refer to the impeller clearance checks and impeller clearance setting sections in Commissioning, Startup, Operation, and Shutdown.

Install the back pull-out assembly

- 1. Clean the casing fit and install the casing gasket (351) on the seal chamber / stuffing- box cover.
- 2. Loosen the clamping bolts (370C) and jack bolts (370D) on the bearing housing.
- 3. Install the back pull-out assembly in the casing.
- 4. Install casing bolts (370) and hand tighten, then tighten to appropriate torque values in table 14.
 - Refer to the bolt torque values for information on how to tighten the casing holts.
- 5. Install and tighten the casing jackscrews (418).

NOTICE

NOTICE:

Do not over tighten the casing jackscrews. Doing so may result in equipment damage.

- 7. Check the total clearance of the impeller in the casing.
 With new parts, an acceptable range is 0.030 in. (0.76 mm) to 0.065 in. (1.65 mm). If the impeller clearance is outside of this range, you either have the incorrect parts, an improper installation, or too much pipe strain. Determine the cause and correct the problem before you proceed.
- 8. Adjust the impeller clearance.
 Refer to the Impeller clearance setting section for more information.
- 9. Replace the auxiliary piping.
- 10. Fill the pump with the proper lubricant. See Lubricating-oil requirements.
- Reinstall the coupling guard.
 See Install the coupling guard for more information.

NOTICE

NOTICE:

Risk of damage to the mechanical seal or shaft sleeve on units supplied with cartridge mechanical seals. Prior to startup, make sure to tighten the set screws in the seal locking ring and remove the centering clips.

Post-assembly checks

Perform these checks after you assemble the pump, then continue with pump startup:

- Rotate the shaft by hand in order to make sure that it rotates easily and smoothly and that there is no rubbing.
- Open the isolation valves and check the pump for leaks.

Assembly references

Bolt torque values

Table 14: Bolt torque, lb-ft (Nm)

This table provides the bolt torque values.

Location	ocation Frame Lube		Dry
	6 inch, Group 1	N/A	N/A
Casing bolts (370) or casing nuts (425)	8 inch, Group 1	35 (47)	53 (71)
casing nats (423)	Group 2, 3	35 (47)	53 (71)
Frame-to adapter bolts	All	20 (27)	30 (40)
Bearing-clamp ring	Group 1, 2	*10 (1.1)	*17 (1.9)
bolts (236A) – duplex bearing only	Group 3	*55 (6.2)	*83 (9.4)
Bearing housing clamp bolt (370C) and jacking bolt (370D)	Group 1, 2, 3	35 (47)	53 (71)
*Values are in ib-in (Nm)			

Table 15: Maximum torque values in lb-ft (Nm) for casing bolts

This table provides the maximum torque values for casing bolts.

		Models PWA, (68 kg) casing	•	-SP with 150 lb	
		Material specification			
		Carbon Steel casing with A307 Grade B casing bolts		Alloy casing with (304SS) F593 Grade 1 or (316SS F593) Grade 2 casing bolts	
Frame	Casing bolt diameter (in.)	Lube	Dry	Lube	Dry
8 inch, Group 1	0.50	20 (27)	30 (41)	35 (47)	54 (73)
6 inch Group 1,	0.625	39 (53)	59 (80)	71 (96)	107 (145)
Group 2 & 3	0.625	39 (53)	59 (80)	71 (96)	107 (145)
Group. 4	0.625	39 (53)	59 (80)	71 (96)	107 (145)
,	0.625	39 (53)	59 (80)	71 (96)	107 (145)

Bearing types

Table 16: Bearing type

Table 10: Bearing type	es		
Frame Double Inboard bearing		Outboard	bearing
Row	duplex	Double Row	Duplex
Group 1	6	3	7
Group 2	6	3	7
Group 3	6	N/A	7

Spare parts

Pump Serial Number is REQUIRED for all Parts Orders. This ensures the correct material and design for your specific pump unit.

• Impeller (101)

- Shaft (122A)
- Shaft sleeve (126)
- Outboard bearing (112A)
- Inboard bearing (168A)
- Casing gasket (351)
- Frame-to-adapter gasket (360D)
- Bearing-housing retaining ring (361A)
- Bearing lock washer (382)
- Bearing locknut (136)
- Impeller O-ring (412A)
- Bearing-housing O-ring (496)
- Outboard labyrinth-seal rotary O-ring (497F)
- Outboard labyrinth-seal stationary O-ring (497G)
- Inboard labyrinth-seal rotary O-ring (497H)
- Inboard labyrinth-seal stationary O-ring (497J)
- Lantern ring half (105) (packed stuffing box)
- Stuffing box packing (106) (packed stuffing box)
- Packing gland (107) (packed stuffing box)
- Impeller gasket (42)

Parts Listings and Cross-Sectional Drawings

Table 1 - Parts List

14	0	Double a compa
Item	Quantity	Part name
100	1	Casing
101	1	Impeller
105	1	Lantern Ring
108	1	Frame Adapter
112A	1	Outboard Bearing
113	2	Plug—Grease Relief
113B	1	Plug—Oil Fill
122A	1	Shaft—Without Sleeve
122	1	Shaft—With Sleeve
126	1	Shaft Sleeve
134	1	Bearing Housing
136	1	Bearing Locknut
168A	1	Radial Bearing
184	1	Seal Chamber/Stuffing Box Cover
193	2	Grease Fitting
228	1	Bearing Frame
236A	10	Cap Screw—Bearing Clamp Ring
239	1	Support, Casing
241	1	Frame Foot
248	1	Flinger Disk
250	1	Gland—Mechanical Seal
253B	1	Bearing Clamp Ring
332A	1	Outboard Labyrinth Seal w/O-rings
333A	1	Inboard Labyrinth Seal w/O-rings
351	1	Casing Gasket
353	4	Gland Stud
355	4	Gland Stud
358	1	Plug—Casing Drain
360D	1	Gasket—Frame-to-Adapter
360Q	1	Gasket—Frame-to-Adapter Gasket—Gland-to-Stuffing Box Cover
361A	1 **	Retaining Ring
370		Bolt – Adapter to Case
370B	4	Bolt—Frame-to-Adapter
370C	3	Clamp Bolt —Bearing Housing
370D	3	Jack Bolt—Bearing Housing
370F	2	Bolt—Frame Foot to Frame
370H	2	Stud—Stuffing Box Cover-to-Adapter
370Y	2	Bolt—Cap Casing to Support
382	1	Bearing Lockwasher
383	1	Mechanical Seal
400	1	Coupling Key
408A	1	Plug—Oil Drain
408H	2	Plug—Oil Mist Connection
408J	1	Plug—Oiler
408L	1	Plug—Oil Cooler Inlet
408M	1	Plug—Oil Cooler Outlet
408N	2	Plug—Sight Glass
412A	1	O-Ring, Teflon Impeller
418	3	Jack Bolt—Adapter-to-Case
		·
423	3	Jam Nut—Bearing Housing Jack Bolt
423B	2	Hex Nut—Stuffing Box Cover to Adapter
428	1	Gasket, Plug
437	1	Lockwasher, Casing to Support
469B	2	Dowel Pin—Frame-to-Adapter
496	1	O-Ring Bearing Housing
497F	1	O-Ring—Outboard Labyrinth Rotor
497G	1	O-Ring—Outboard Labyrinth Stator
497H	1	O-Ring—Inboard Labyrinth Rotor
	, -	- ·····O ······························

497J	1	O-Ring—Inboard Labyrinth Stator
497L	1	O-Ring Internal (inboard)
497N	1	O-Ring Internal (outboard)
503	1	Adapter Ring
529	1	Lockwasher—Frame Foot-to-Bearing Frame

Table 2: Key to table symbols

**	4 for 6 in. Group 1
	8 for 8 in. Group 1 and Group 2
	16 for 13 in. Group 2, Group 3
	12 for 10 in. Group 2, Group 3

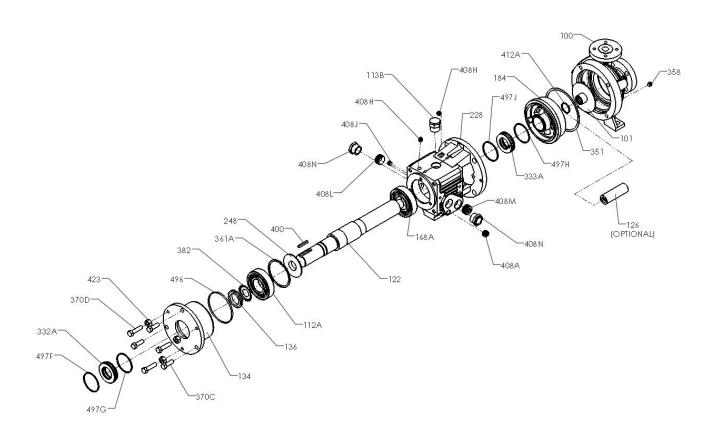


Figure 1: Group 1 Pump Exploded View

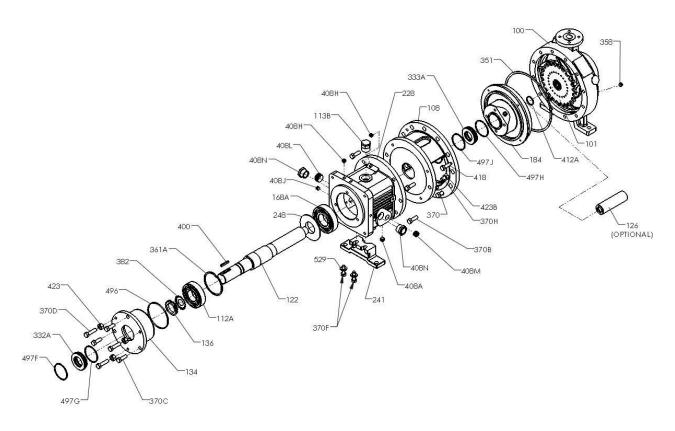


Figure 2: Group 2 Pump Exploded View

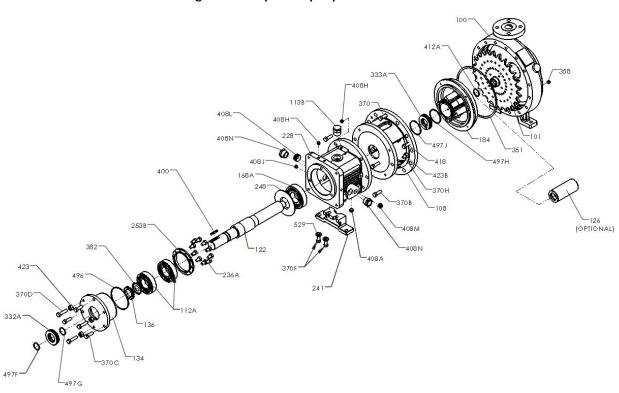


Figure 3: Group 3 Pump Exploded View

Visit our website for more information.


www.bestpumpworksindustrial.com

See our other products at:

www.bestpumporks.com

www.pumpworks610.com



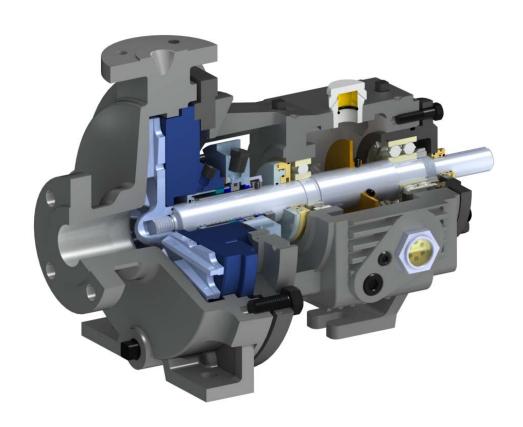



65 Southbelt Industrial Drive Houston, TX 77047 U.S.A.

Ph: (713) 892-5875 Fx: (713) 343-0765